



385...B04  
385...C04  
385...D04  
386...E04  
387...F04  
387...G04  
387...H04  
387...I04  
387...J04  
387...K04  
388...L04  
388...M04  
389...N04  
389...O04

ASSEMBLY  
PART NUMBERCOMPONENT  
PART NUMBER

DESC

SP  
TYCOMP  
INSP

Q-A

COMP  
SGCASSY  
CODEASSY  
INSP

SGC

ASSY  
DESCEND PLAY OR  
PRELOADOBSOLETE  
DATE

385A

385 384ED X45-385	CONE CUP CONE	SPCR A	40024 40024 20000	2 1 1	2BL 1BB 04P	90024	40024	5BB	ASSEMBLY	EP .0080	91 231
385 384ED X45-385	CONE CUP CONE	SPCR A	0 0 0	2 1 1	2BF 1BG 04P	90299 90268	0 0	6BB 6BB	ASSEMBLY ASSEMBLY	EP .0010 EP .0060	
385 384EDC X45-385	CONE CUP CONE	SPCR A	20024 20024 20000	2 1 1	2BL 1BB 04P	90316	20024	5BB	ASSEMBLY	EP .0020	
385 384EDC X45-385	CONE CUP CONE	SPCR A	30000 30000 0	2 1 1	2BF 1BG 04P	90206	30000	6BB	ASSEMBLY	EP .0060	
385 384EDC X45-385	CONE CUP CONE	SPCR A	40024 40024 20000	2 1 1	2BL 1BB 04P	90261 90220	40024 40024	5BB 5BB	ASSEMBLY ASSEMBLY	EP .0080 EP .0120	
385 28680 382A 28622 X55-385	CONE CONE CUP CUP CONE	SPCR	40024 40024 40024 40024 20000	1 1 1 1 1	2BL 2BL 1BE 1BP 04A	90254	40024	5BA	ASSEMBLY	EP .0160	77 189
385A 382	CONE CUP		0 0	1 1	2BF 1BF	90025	0	6BA	ASSEMBLY		
385A 382A	CONE CUP		0 0	1 1	2BF 1BF	90109	0	6BA	ASSEMBLY		
385A 382A Y15-382A	CONE CUP CUP	SPCR R	40024 40024 20000	2 2 1	2BL 1BE 04Q	90208	40024	5BA	ASSEMBLY	EP .0080	
385A 382 B	CONE CUP		0 0	1 1	2BF 1BH	90140	0	6BA	ASSEMBLY		
385A 383A	CONE CUP		0 0	1 1	2BF 1BF	90026	0	6BA	ASSEMBLY		
385A 384D X15-385A	CONE CUP CONE	SPCR A	20024 20024 20000	2 1 1	2BL 1BB 04A	90215	20024	5BB	ASSEMBLY	EP .0080	
385A 384D X15-385A	CONE CUP CONE	SPCR A	30000 30000 0	2 1 1	2BF 1BG 04A	90171	30000	6BB	ASSEMBLY	EP .0050	
385A 384D X15-385A	CONE CUP CONE	SPCR A	40024 40024 20000	2 1 1	2BL 1BB 04A	90027 90259 90194	40024 40024 40024	5BB 5BB 5BB	ASSEMBLY ASSEMBLY ASSEMBLY	EP .0060 EP .0100 EP .0120	
385A 384DC X15-385A	CONE CUP CONE	SPCR A	40024 40024 20000	2 1 1	2BL 1BB 04A	90348	40024	5BB	ASSEMBLY	EP .0080	
385A 384ED	CONE CUP		0 0	2 1	2BF 1BG	90313	0	6BB	ASSEMBLY		
385A 384ED X25-385A	CONE CUP CONE	SPCR A	20024 20024 20000	2 1 1	2BL 1BB 04P	90175	20024	5BB	ASSEMBLY	EP .0080	
385A 384ED X25-385A	CONE CUP CONE	SPCR A	30000 30000 0	2 1 1	2BF 1BG 04P	90161 90235 90222 90338	30000 30000 30000 30000	6BB 6BB 6BB 6BB	ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY	EP .0010 EP .0050 EP .0060 EP .0080	

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	COMP Q-A SGC	ASSY CODE	ASSY INSP	ASSY SGC DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	385A	CONE		40024	2 2BL	90028	40024	5BB ASSEMBLY	EP .0080	
	384ED	CUP		40024	1 1BG	90029	40024	5BB ASSEMBLY	EP .0120	
	X25-385A	CONE SPCR A		20000	1 04P					
	385A	CONE		0	2 2BF	90243	0	6BB ASSEMBLY	EP .0060	
	384ED	CUP		0	1 1BG					
	X25-385A	CONE SPCR A		0	1 04P					
385AA	385AA	CONE		40024	2 2BA	90179	40024	5BA ASSEMBLY	EP .0100	
	382A	CUP		40024	2 1BE					
	Y15-382A	CUP SPCR R		20000	1 04Q					
385AB	385AB	CONE		00	2 2BF	90287	00	7BB ASSEMBLY	EP .0030	88 217
	384D	CUP		00	1 1BG					
	X15-385A	CONE SPCR A		00	1 04A					
385AS	385AS	CONE		0	1 2BF	90123	0	6BA ASSEMBLY		
	382	CUP		0	1 1BF					
	385AS	CONE		0	1 2BF	90031	0	6BA ASSEMBLY		
	383A	CUP		0	1 1BF					
	385AS	CONE		20024	2 2BA	90233	20024	5BB ASSEMBLY	EP .0080	
	384D	CUP		20024	1 1BG					
	X15-385A	CONE SPCR A		20000	1 04A					
	385AS	CONE		20024	2 2BA	90298	20024	5BB ASSEMBLY	EP .0080	
	384DC	CUP		20024	1 1BG					
	X15-385A	CONE SPCR A		20000	1 04A					
	385AS	CONE		20024	2 2BA	90032	20024	5BB ASSEMBLY	EP .0080	
	384ED	CUP		20024	1 1BG					
	X25-385A	CONE SPCR A		20000	1 04P					
385AX	385AX	CONE		0	1 2BF	90189	0	6BA ASSEMBLY		
	382A	CUP		0	1 1BF					
	385AX	CONE		0-30	1 2BF	90224	0-33	6BA ASSEMBLY		
	382A	CUP		0-39	1 1BF					
	385AX	CONE		0	1 2BF	90190	0	6BA ASSEMBLY		
	382-B	CUP		0	1 1BH					
	385AX	CONE		0-30	1 2BF	90225	0-33	6BA ASSEMBLY		
	382-B	CUP		0-39	1 1BH					
	385AX	CONE		30000	2 2BF	90302	30000	6BB ASSEMBLY	EP .0060	
	384D	CUP		30000	1 1BG					
	X15-385A	CONE SPCR A		0	1 04A					
	385AX	CONE		4E024	2 2BA	9E4A3	4E024	5BB ASSEMBLY	EP .0080	
	384DRB	CUP		4E024	1 1BB					
	X25-385A	CONE SPCR A		2E000	1 04P					
	385AX	CONE		40024	2 2BE	9E4A6	4E024	5BB ASSEMBLY	EP .0080	
	384DRB	CUP		4E024	1 1BB					
	X25-385A	CONE SPCR A		2E000	1 04P					
	385AX	CONE		40024	2 2BE	9U307	4U024	5BB ASSEMBLY	EP .0080	
	384DRB	CUP		40024	1 1BB					
	X25-385A	CONE SPCR A		20000	1 04P					
	385AX	CONE		40024	2 2BE	90307	40024	5BB ASSEMBLY	EP .0080	
	384DRB	CUP		40024	1 1BB					
	X25-385A	CONE SPCR A		20000	1 04P					
	385AX	CONE		0	2 2BF	90033	0	6BB ASSEMBLY		
	384ED	CUP		0	1 1BG					

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY CR PRELOAD	OBSOLETE DATE
	385AX 384ED X25-385A	CONE CUP CONE SPCR A		20024 20024 20000		2 2BE 1 1BB 1 04P	90034	20024	5BB	ASSEMBLY	EP .0060	
385-B	385-B 382-B	CONE CUP		00 00		1 2BF 1 1BH	90273	00	7BA	ASSEMBLY		88 217
	385-B 383	CONE CUP		00 00		1 2BF 1 1BF	90035	00	7BA	ASSEMBLY		88 217
	385-B 383A	CONE CUP		00 00		1 2BF 1 1BF	90036	00	7BA	ASSEMBLY		88 217
	385-B 384D X15-385	CONE CUP CONE SPCR A		00 00 00		2 2BF 1 1BG 1 04A	90266	00	7BB	ASSEMBLY	EP .0040	88 217
	385-B 384ED	CONE CUP		00 00		2 2BF 1 1BG	90320	00	7BB	ASSEMBLY		88 217
385X	385X 382	CONE CUP		0 0		1 2BF 1 1BF	90211	0	6BA	ASSEMBLY		
	385X 382A Y15-382A	CONE CUP CUP SPCR R		40024 40024 20000		2 2BL 2 1BE 1 04Q	904A1	40499	5BA	ASSEMBLY		
	385X 383	CONE CUP		0 0		1 2BF 1 1BF	90114	0	6BA	ASSEMBLY		
	385X 383A	CONE CUP		0 0		1 2BF 1 1BF	90326	0	6BA	ASSEMBLY		
	385X 384D X15-385	CONE CUP CONE SPCR A		30000 30000 0		2 2BF 1 1BG 1 04A	90186 90105	30000 30000	6BB 6BB	ASSEMBLY ASSEMBLY	EP .0040 EP .0070	
	385X 384ED X45-385	CONE CUP CONE SPCR A		20024 20024 20000		2 2BL 1 1BB 1 04P	90162	20024	5BB	ASSEMBLY	EP .0040	
	385X 384ED X45-385	CONE CUP CONE SPCR A		40024 40024 20000		2 2BL 1 1BB 1 04P	90202	40024	5BB	ASSEMBLY	EP .0080	
NA385	NA385 384D	CONE CUP		20194 20081		2 2BA 1 1BB	90039	20194	5BB	ASSEMBLY	EP .0170	
	NA385 384D	CONE CUP		30000 30001		2 2BF 1 1BG	90038	30000	6BB	ASSEMBLY	EP .0050	
NA385-SH	NA385-SH K518331 K518332 K524115	CONE CUP CLOSURE SNAP RING		30441 30441		2 2BZ 1 1CZ 2 411 2 090	90350	30441	6CZ	ASSEMBLY	EP .0010-.0030	
NA385-SHV	NA385-SHV K518331 K518332 K524115	CONE CUP CLOSURE SNAP RING		30227 30441		2 2BZ 1 1CZ 2 411 2 090	903A2	30227	6CZ	ASSEMBLY	EP .0010-.0030	
	NA385-SHV K518331 K518332 K524115	CONE CUP CLOSURE SNAP RING		30441 30441		2 2BZ 1 1CZ 2 411 2 090	90347	30441	6CZ	ASSEMBLY	EP .0010-.0030	86 215
386A	386A 382	CONE CUP		0 0		1 2BF 1 1BF	90102	0	6BA	ASSEMBLY		
	386A 382A	CONE CUP		0 0		1 2BF 1 1BF	90321	0	6BA	ASSEMBLY		

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY DR PRELOAD	OBSOLETE DATE
	386A	CONC		40024	2	2BE	90232	40024	5BA	ASSEMBLY	PL .0030	
	382A	CUP		40024	2	1BE						
	Y35-382A	CUP SPCR R		20000	1	04A						
	X35-386A	CONE SPCR A		20000	1	04A						
	386A	CONC		0	1	2BF	90041	0	6BA	ASSEMBLY		
	382-B	CUP		0	1	1BH						
	386A	CONC		0	1	2BF	90290	0	6BA	ASSEMBLY		
	383	CUP		0	1	1BF						
	386A	CONC		0	1	2BF	90042	0	6BA	ASSEMBLY		
	383A	CUP		0	1	1BF						
	386A	CONC		0	1	2BF	90160	0	6BA	ASSEMBLY		
	383X	CUP		0	1	1BF						
	386A	CONC		20024	2	2BE	90217	20024	5BB	ASSEMBLY	EP .0040	
	384D	CUP		20024	1	1BB						
	X25-386A	CONE SPCR A		20000	1	04A						
	386A	CONC		40024	2	2BE	90270	40024	5BB	ASSEMBLY	EP .0060	
	384D	CUP		40024	1	1BB						
	X25-386A	CONE SPCR A		20000	1	04A						
	386A	CONC		40024	2	2BE	90297	40024	5BB	ASSEMBLY	EP .0080	
	384DRB	CUP		40024	1	1BB						
	X15-386A	CONE SPCR A		20000	1	04A						
	386A	CONC		0	2	2BF	90335	0	6BB	ASSEMBLY		
	384ED	CUP		0	1	1BG						
	386A	CONC		20024	2	2BE	90165	20024	5BB	ASSEMBLY	EP .0080	
	384ED	CUP		20024	1	1BB						
	X15-386A	CONE SPCR A		20000	1	04A						
	386A	CONC		30000	2	2BF	90339	30000	6BB	ASSEMBLY	EP .0060	
	384ED	CUP		30000	1	1BG						
	X15-386A	CONE SPCR A		0	1	04A						
	386A	CONC		40024	2	2BE	90108	40024	5BB	ASSEMBLY	EP .0060	
	384ED	CUP		40024	1	1BB	90269	40024	5BB	ASSEMBLY	EP .0120	
	X15-386A	CONE SPCR A		20000	1	04A						
386AB	386AB	CONC		00	1	2BF	90169	00	7BA	ASSEMBLY		82 307
	382	CUP		00	1	1BF						
	386AB	CONC		00	2	2BF	90281	00	7BB	ASSEMBLY	EP .0030	82 307
	384ED	CUP		00	1	1BG						
	X15-386A	CONE SPCR A		00	1	04A						
386AX	386AX	CONC		40024	2	2BA	90155	40024	5BA	ASSEMBLY	EP .0080	
	382A	CUP		40024	2	1BE						
	Y15-382A	CUP SPCR R		20000	1	04A						
NA386-SHW	NA386-SHW	CONC		30441	2	2BF	903A1	30441	6CZ	ASSEMBLY	EP .0010-.0030	
	K518331	CUP		30441	1	1CZ						
	K518332	CLOSURE			2	411						
	K524115	SNAP RING			2	090						
387	387	CONC		0	1	2BF	90043	0	6BA	ASSEMBLY		
	382	CUP		0	1	1BF						
	387	CONC		0-30	1	2BF	90234	0-33	6BA	ASSEMBLY		
	382	CUP		0-39	1	1BF						
	387	CONC		00	1	2BF	906B5	00	7BB	ASSEMBLY		
	382	CUP		00	1	1BF						

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OBSOLETE DATE
387	382	CONE		40024		2 2BE	90144	40024	5BA	ASSEMBLY	EP .0120	77 189
	382	CUP		40024		2 1BP						
	Y25-382	CUP SPCR		20000		1 04B						
	X15-387A	CONE SPCR A		20000		1 04P						
387	382	CONE		40024		2 2BE	9E4A9	4E024	5BA	ASSEMBLY		88 217
	382	CUP		4E024		2 1BP						
	Y55-382	CUP SPCR		2E000		1 04B						
	X55 387	CONE SPCR A		2E000		1 04A						
387	382A	CONE		0		1 2BF	90044	0	6BA	ASSEMBLY		
	382A	CUP		0		1 1BF						
387	382A	CONE		0-30		1 2BF	90045	0-33	6BA	ASSEMBLY		
	382A	CUP		0-39		1 1BF						
387	382A	CONE		0-174		1 2BF	90332	0-174	6BA	ASSEMBLY		
	382A	CUP		0		1 1BF						
387	382-B	CONE		0		1 2BF	90046	0	6BA	ASSEMBLY		
	382-B	CUP		0		1 1BH						
387	382-B	CONE		0-30		1 2BF	90047	0-30	6BA	ASSEMBLY		
	382-B	CUP		0		1 1BH						
387	383	CONE		0		1 2BF	90048	0	6BA	ASSEMBLY		
	383	CUP		0		1 1BF						
387	383A	CONE		0		1 2BF	90049	0	6BA	ASSEMBLY		
	383A	CUP		0		1 1BF						
387	383A	CONE		30434		2 2BF	90300	30434	6BS	ASSEMBLY	EP .0000	
	383A	CUP		30039		2 1BF						
	Y35-383A	CUP SPCR Q		0		1 04B						
	X75-387	CONE SPCR A		0		1 04A						
387	383X	CONE		0		1 2BF	90050	0	6BA	ASSEMBLY		
	383X	CUP		0		1 1BF						
387	384D	CONE		0		2 2BF	90319	0	6BB	ASSEMBLY		
	384D	CUP		0		1 1BG						
387	384D	CONE		0-30		2 2BF	90119	0-30	6BB	ASSEMBLY		
	384D	CUP		0		1 1BG						
387	384D	CONE		20024		2 2BE	90052	20024	5BB	ASSEMBLY	EP .0040	
	384D	CUP		20024		1 1BB	90122	20024	5BB	ASSEMBLY	EP .0080	
	X15-387A	CONE SPCR A		20000		1 04P	90053	20024	5BB	ASSEMBLY	EP .0100	
							90054	20024	5BB	ASSEMBLY	EP .0120	
							90248	20024	5BB	ASSEMBLY	EP .0160	
387	384D	CONE		30000		2 2BF	90051	30000	6BB	ASSEMBLY	EP .0000	
	384D	CUP		30000		1 1BG	90219	30000	6BB	ASSEMBLY	EP .0040	
	X15-387A	CONE SPCR A		0		1 04P	90238	30000	6BB	ASSEMBLY	EP .00E0	
							903A1	30000	6BB	ASSEMBLY	PI .0010	
387	384D	CONE		30030		2 2BF	90174	30030	6BB	ASSEMBLY	EP .0030	
	384D	CUP		30000		1 1BG						
	X15-387A	CONE SPCR A		0		1 04P						
387	384D	CONE		30434		2 2BF	90301	30434	6BB	ASSEMBLY	EP .0000	
	384D	CUP		30039		1 1BG						
	X15-387A	CONE SPCR A		0		1 04P						
387	384D	CONE		40024		2 2BE	90247	40024	5BB	ASSEMBLY	EP .0080	
	384D	CUP		40024		1 1BB	90055	40024	5BB	ASSEMBLY	EP .0120	
	X15-387A	CONE SPCR A		20000		1 04P						
387	384D	CONE		0-30		2 2BF	90117	0-30	6BB	ASSEMBLY	EP .0030	
	384D	CUP		0		1 1BG						
	X15-387A	CONE SPCR A		0		1 04P						

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	DR	OBSOLETE DATE
387 384D X15-387A	CONE CUP CONE	SPCR A		0-30 0-39 0		2 2BF 1 1BG 1 04P	90264	0-33	6BB	ASSEMBLY	EP .0060		
387 384DC X15-387A	CONE CUP CONE	SPCR A		30000 30000 0		2 2BF 1 1BG 1 04P	90272	30000	6BB	ASSEMBLY	EP .0000		
387 384DC X15-337A	CONE CUP CONE	SPCR A		40024 40024 20000		2 2BE 1 1BB 1 04P	90275	40024	5BB	ASSEMBLY	EP .0000		
387 384DC X15-387A	CONE CUP CONE	SPCR A		0 0 0		2 2BF 1 1BG 1 04P	90257	0	6BB	ASSEMBLY	EP .0050		
387 384ED	CONE CUP			0 0		2 2BF 1 1BG	90110	0	6BB	ASSEMBLY			
387 384ED	CONE CUP			0-30 0-39		2 2BF 1 1BG	90056	0-33	6BB	ASSEMBLY			
387 384ED	CONE CUP			00 00		2 2BF 1 1BG	90682	00	7BB	ASSEMBLY			
387 384ED	CONE CUP			00-227 00-227		2 2BF 1 1BG	90353	00-227	7BB	ASSEMBLY			
387 384ED	CONE CUP			00-650 00-650		2 2BF 1 1BG	90683	00-650	7B7	ASSEMBLY			
387 384ED X15-387	CONE CUP CONE	SPCR A		20024 20024 20000		2 2BE 1 1BB 1 04P	90180 90059 90060	20024 20024 20024	5BB 5BB 5BB	ASSEMBLY ASSEMBLY ASSEMBLY	EP .0030 EP .0080 EP .0120		
387 384ED X15-387	CONE CUP CONE	SPCR A		30000 30000 0		2 2BF 1 1BG 1 04P	90057 90283 90058 90113 90204	30000 30000 30000 30000 30000	6BB 6BB 6BB 6BB 6BB	ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY	EP .0000 EP .0030 EP .0040 EP .0060 EP .0080		
387 384ED X15-387	CONE CUP CONE	SPCR A		30030 30039 0		2 2BF 1 1BG 1 04P	90284	30033	6BB	ASSEMBLY	EP .0010		
387 384ED X15-387	CONE CUP CONE	SPCR A		30434 30039 0		2 2BF 1 1BG 1 04P	90345	30434	6BB	ASSEMBLY	EP .0020		
387 384ED X15-387	CONE CUP CONE	SPCR A		40024 40024 20000		2 2BE 1 1BB 1 04P	90304 90240 90293	40024 40024 40024	5BB 5BB 5BB	ASSEMBLY ASSEMBLY ASSEMBLY	EP .0060 EP .0120 EP .0160		
387 384ED X15-387	CONE CUP CONE	SPCR A		0 0 0		2 2BF 1 1BG 1 04P	90185	0	6BB	ASSEMBLY	EP .0050		
387 384ED X15-387	CONE CUP CONE	SPCR A		0-434 0-39 0		2 2BF 1 1BG 1 04P	905A4	0-434	6BB	ASSEMBLY	EP .0000		
387 384ED X25-387	CONE CUP CONE	SPCR BB		20024 20024 20000		2 2BE 1 1BB 1 04A	902A6	20024	5BB	ASSEMBLY	EP .0200		
387 384ED X25-387	CONE CUP CONE	SPCR BB		30000 30000 0		2 2BF 1 1BG 1 04A	90061	30000	6BB	ASSEMBLY	EP .0090		

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OR	OBSOLETE DATE
	387	CONE		40024		2 2BE	90062	40024	5BB	ASSEMBLY	EP .0160		
	384ED	CUP		40024		1 1BB	90063	40024	5BB	ASSEMBLY	EP .0200		
	X25-387	CONE SPCR BB		20000		1 04A							
387A	387A	CONE		0		1 2BF	90064	0	6BA	ASSEMBLY			
	382	CUP		0		1 1BF							
	387A	CONE		4E024		2 2BA	9E4A2	4E024	5BA	ASSEMBLY	EP .0080		
	382	CUP		4E024		2 1BP							
	Y65-382	CUP SPCR R		2E000		1 04B							
	X45-387	CONE SPCR A		2E000		1 04A							
	387A	CONE		4E024		2 2BA	9E4A3	4E499	5BA	ASSEMBLY			
	382	CUP		4E024		2 1BP							
	Y65-382	CUP SPCR R		2E000		1 04B							
	X45-387	CONE SPCR A		2E000		1 04A							
	387A	CONE		40024		2 2BE	9E4A8	4E024	5BA	ASSEMBLY	EP .0080		
	382	CUP		4E024		2 1BP							
	Y65-382	CUP SPCR R		2E000		1 04B							
	X45-387	CONE SPCR A		2E000		1 04A							
	387A	CONE		0		1 2BF	90065	0	6BA	ASSEMBLY			
	382A	CUP		0		1 1BF							
	387A	CONE		40024		2 2BE	90170	40024	5BA	ASSEMBLY	EP .0080		
	382A	CUP		40024		2 1BE	90173	40024	5BA	ASSEMBLY	EP .0120		
	Y15-382A	CUP SPCR R		20000		1 04Q							
	387A	CONE		40024		2 2BE	90351	40024	5BA	ASSEMBLY	EP .0120		
	382A	CUP		40024		2 1BE	90306	40024	5BA	ASSEMBLY	EP .0200		
	Y45-382A	CUP SPCR RSR		20000		1 04Q							
	X15-387	CONE SPCR A		20000		1 04P							
	387A	CONE		20024		2 2BE	90334	20024	5BA	ASSEMBLY	EP .0040		
	382A	CUP		20024		2 1BE							
	Y55-382A	CUP SPCR Q		20000		1 04B							
	X35-387A	CONE SPCR A		20000		1 04A							
	387A	CONE		20024		2 2BE	90213	20024	5BA	ASSEMBLY	EP .0100		
	382A	CUP		20024		2 1BE							
	X15-387	CONE SPCR A		20000		1 04P							
	387A	CONE		40024		2 2BE	90294	40024	5BA	ASSEMBLY	EP .0160		77 189
	382A	CUP		40024		2 1BE							
	X25-387A	CONE SPCR		20000		1 04A							
	387A	CONE		40024		2 2BE	90344	40024	5BA	ASSEMBLY	EP .0160		
	382A	CUP		40024		2 1BE							
	X35-387A	CONE SPCR A		20000		1 04A							
	387A	CONE		0		1 2BF	90066	0	6BA	ASSEMBLY			
	382-B	CUP		0		1 1BH							
	387A	CONE		0		1 2BF	90067	0	6BA	ASSEMBLY			
	383A	CUP		0		1 1BF							
	387A	CONE		20024		2 2BE	902A6	20024	5BA	ASSEMBLY	EP .0060		
	383A	CUP		20024		2 1BP	902B1	20024	5BA	ASSEMBLY	EP .0120		
	Y25-383A	CUP SPCR Q		20000		1 04Q							
	387A	CONE		0		2 2BF	90166	0	6BB	ASSEMBLY			
	384D	CUP		0		1 1BG							
	387A	CONE		20024		2 2BE	90178	20024	5BB	ASSEMBLY	EP .0080		
	384D	CUP		20024		1 1BB							
	X15-387A	CONE SPCR A		20000		1 04P							
	387A	CONE		30000		2 2BF	90260	30000	6BB	ASSEMBLY	EP .0050		
	384D	CUP		30000		1 1BG	90231	30000	6BB	ASSEMBLY	EP .0060		
	X15-387A	CONE SPCR A		0		1 04P							



ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	387A	CONE		40024	2	2BE	90068	40024	5BB	ASSEMBLY	EP .0080	
	384D	CUP		40024	1	1BB	90271	40024	5BB	ASSEMBLY	EP .0100	
	X1S-387A	CONE SPCR A		20000	1	04P	90295	40024	5BB	ASSEMBLY	EP .0120	
	387A	CONE		0	2	2BF	90265	0	6BB	ASSEMBLY		
	384ED	CUP		0	1	1BG						
	387A	CONE		0-30	2	2BF	90106	0-33	6BB	ASSEMBLY		
	384ED	CUP		0-39	1	1BG						
	387A	CONE		20024	2	2BE	90349	20024	5BB	ASSEMBLY	EP .0040	
	384ED	CUP		20024	1	1BB	90070	20024	5BB	ASSEMBLY	EP .0060	
	X1S-387	CONE SPCR A		20000	1	04P	90279	20024	5BB	ASSEMBLY	EP .0080	
							90218	20024	5BB	ASSEMBLY	EP .0120	
	387A	CONE		30000	2	2BF	90309	30000	6BB	ASSEMBLY	EP .0050	
	384ED	CUP		30000	1	1BG	90322	30000	6BB	ASSEMBLY	EP .0080	
	X1S-387	CONE SPCR A		0	1	04P	90312	30000	6BB	ASSEMBLY	EP .0080	
	387A	CONE		40024	2	2BE	90267	40024	5BB	ASSEMBLY	EP .0080	
	384ED	CUP		40024	1	1BB	90207	40024	5BB	ASSEMBLY	EP .0120	
	X1S-387	CONE SPCR A		20000	1	04P						
	387A	CONE		0	2	2BF	90315	0	6BB	ASSEMBLY	EP .0010	
	384ED	CUP		0	1	1BG						
	X1S-387	CONE SPCR A		0	1	04P						
	387A	CONE		0-30	2	2BF	90069	0-33	6BB	ASSEMBLY	EP .0040	
	384ED	CUP		0-39	1	1BG						
	X1S-387	CONE SPCR A		0	1	04P						
	387A	CONE		20024	2	2BE	90226	20024	5BB	ASSEMBLY	EP .0000	
	384EDC	CUP		20024	1	1BB	90258	20024	5BB	ASSEMBLY	EP .0050	
	X1S-387	CONE SPCR A		20000	1	04P						
	387A	CONE		30000	2	2BF	90282	30000	6BB	ASSEMBLY	EP .0030	
	384EDC	CUP		30000	1	1BG	90277	30000	6BB	ASSEMBLY	EP .0050	
	X1S-387	CONE SPCR A		0	1	04P						
	387A	CONE		40024	2	2BE	90212	40024	5BB	ASSEMBLY	EP .0120	
	384EDC	CUP		40024	1	1BB						
	X1S-387	CONE SPCR A		20000	1	04P						
	387A	CONE		0	2	2BF	90253	0	6BB	ASSEMBLY	EP .0060	
	384EDC	CUP		0	1	1BG						
	X1S-387	CONE SPCR A		0	1	04P						
	387A	CONE		20024	2	2BE	90355	20157	5BB	ASSEMBLY	EP .0060	
	384XD	CUP		20157	1	1BB						
	X4S-387A	CONE SPCR A		20000	1	04P						
	387A	CONE		20024	2	2BE	90352	20157	5BB	ASSEMBLY	EP .0060	
	XC1475DB	CUP		20157	1	1BB						
	X1S-387A	CONE SPCR A		20000	1	04P						
	387A	CONE		40025	2	2BE	90341	40025	5BB	ASSEMBLY	EP .0060	
	XC1475DB	CUP		40024	1	1BB						
	X1S-387A	CONE SPCR A		20000	1	04P						
	387A	CONE		40024	1	2BE	90445	40082	5BA	ASSEMBLY	EP .0080	
	3979	CONE		40082	1	2CE						
	382-B	CUP		40024	1	1BC						
	3920	CUP		40082	1	1BE						
	X1S-66225	CONE SPCR A		20000	1	04P						
387AB	387AB	CONE		00	1	2BF	90071	00	7BA	ASSEMBLY		89 079
	382-B	CUP		00	1	1BH						
	387AB	CONE		00	2	2BF	90137	00	7BB	ASSEMBLY		88 2:7
	384ED	CUP		00	1	1BG						

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	ASSY SGC	ASSY DESC	END PLAY OR PRELOAD	OBSCLETE DATE
387AS	387AB	CONE		00		2 2BF	90168	00		7BB ASSEMBLY	EP .0040	88 217
	384ED	CUP		00		1 1BG						
	X15-387	CONE	SPCR A	00		1 04P						
	387AS	CONE		0		1 2BF	90072	0		6BA ASSEMBLY		
	383X	CUP		0		1 1BF						
	387AS	CONE		0		2 2BF	90073	0		6BB ASSEMBLY		
	384ED	CUP		0		1 1BG						
	387AS	CONE		0-30		2 2BF	90173	0-33		6BB ASSEMBLY		
	384ED	CUP		0-39		1 1BG						
	387AS	CONE		30000		4 2BF	90325	30000		6BC ASSEMBLY	EP .0020	
	384ED	CUP		30000		2 1BG						
	X15-384	CUP	SPCR R	0		1 04P						
X15-387	CONE	SPCR A	0		2 04P							
387-B	387AS	CONE		20024		2 2BE	902A7	20024		5BB ASSEMBLY	EP .0080	
	384ED	CUP		20024		1 1BB						
	X15-387	CONE	SPCR A	20000		1 04P						
	387AS	CONE		40024		2 2BE	90223	40024		5BB ASSEMBLY	EP .0080	
	384ED	CUP		40024		1 1BB						
	X15-387	CONE	SPCR A	20000		1 04P						
	387-B	CONE		00		1 2BF	90074	00		7BA ASSEMBLY		89 121
	382	CUP		00		1 1BF						
	387-B	CONE		00		1 2BF	90132	00		7BA ASSEMBLY		88 217
	382A	CUP		00		1 1BF						
	387-B	CONE		00		1 2BF	90075	00		7BA ASSEMBLY		88 217
	382-B	CUP		00		1 1BH						
387-B	CONE		00		1 2BF	90131	00		7BA ASSEMBLY		88 217	
383A	CUP		00		1 1BF							
387-B	CONE		00		2 2BF	90221	00		7BB ASSEMBLY		88 217	
384D	CUP		00		1 1BG							
387-B	CONE		00		2 2BF	90134	00		7BB ASSEMBLY	EP .0040	88 217	
384D	CUP		00		1 1BG							
X15-387A	CONE	SPCR A	00		1 04P							
387-B	CONE		00		2 2BF	90120	00		7BB ASSEMBLY		89 079	
384ED	CUP		00		1 1BG							
387-B	CONE		00 227		2 2BF	90227	00 227		7BB ASSEMBLY		88 217	
384ED	CUP		00-227		1 1BG							
387-B	CONE		00		2 2BF	90303	00		7BB ASSEMBLY	EP .0020	88 217	
384ED	CUP		00		1 1BG							
X15-387	CONE	SPCR A	00		1 04P							
387-B	CONE		00		2 2BF	90263	00		7BB ASSEMBLY	EP .0030	88 217	
384EDC	CUP		00		1 1BG							
X15-387	CONE	SPCR A	00		1 04P							
387-S	387-S	CONE		0		1 2BF	90230	0		6BA ASSEMBLY		
	382	CUP		0		1 1BF						
	387-S	CONE		0-30		1 2BF	90250	0-33		6BA ASSEMBLY		
	382	CUP		0-39		1 1BF						
	387-S	CONE		20024		2 2B1	90241	20024		5BB ASSEMBLY	EP .0120	
	384D	CUP		20024		1 1BB						
X15-387A	CONE	SPCR A	20000		1 04P							

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	387-S 384D X1S-387A	CONE CUP CONE SPCR A		30000 30000 0		2 2BF 1 1BG 1 04P	90350	30000	6BB	ASSEMBLY	EP .0040	
	387-S 384D X1S-387A	CONE CUP CONE SPCR A		40024 40024 20000		2 2BL 1 1BB 1 04P	90191 90229	40024 40024	5BB 5BB	ASSEMBLY ASSEMBLY	EP .0080 EP .0120	
	387-S 384ED	CONE CUP		0-30 0		2 2BF 1 1BG	90181	0-30	6BB	ASSEMBLY		
	387-S 384ED X1S-387	CONE CUP CONE SPCR A		20024 20024 20000		2 2BL 1 1BB 1 04P	90158 90205	20024 20024	5BB 5BB	ASSEMBLY ASSEMBLY	EP .0030 EP .0080	
	387-S 384ED X1S-387	CONE CUP CONE SPCR A		20030 20157 20000		2 2BL 1 1BB 1 04P	90343	20358	5BB	ASSEMBLY	EP .0080	
	387-S 384ED X1S-387	CONE CUP CONE SPCR A		40024 40024 20000		2 2BL 1 1BB 1 04P	90317	40024	5BB	ASSEMBLY	EP .0080	
	387-S 384ED X1S-387	CONE CUP CONE SPCR A		0 0 0		2 2BF 1 1BG 1 04P	90196	0	6BB	ASSEMBLY	EP .0050	
	387-S 384ED X2S-387	CONE CUP CONE SPCR BB		40024 40024 20000		2 2BL 1 1BB 1 04A	90310	40024	5BB	ASSEMBLY	EP .0120	
387H	387H 382	CONE CUP		0 0		1 2BF 1 1BF	90076	0	6BA	ASSEMBLY		
	387H 382	CONE CUP		00 00		1 2BF 1 1BF	90354	00	7BA	ASSEMBLY		
	387H 382A	CONE CUP		0 0		1 2BF 1 1BF	90077	0	6BA	ASSEMBLY		
	387H 382-B	CONE CUP		0 0		1 2BF 1 1BH	90075	0	6BA	ASSEMBLY		
	387H 383A	CONE CUP		0 0		1 2BF 1 1BF	90079	0	6BA	ASSEMBLY		
387HB	387HB 382	CONE CUP		00 00		1 2BF 1 1BF	90080	00	7BA	ASSEMBLY		82 307
1387	1380 1387 1387C 1387R	ROLLER RACE THR CAGE CAGE		40000		35 010 2 088 1 062 1 028	914B4	41000	330	THR BRG		
	1380 1387 1387C 1387R	ROLLER RACE THR CAGE CAGE		40000		35 010 2 088 1 062 1 028	904B4	40000	330	THR BRG		
388A	388A 382	CONE CUP		0 0		1 2BF 1 1BF	90327	0	6BA	ASSEMBLY		
	388A 382A	CONE CUP		0 0		1 2BF 1 1BF	90081	0	6BA	ASSEMBLY		
	388A 382A Y1S-382A	CONE CUP CUP SPCR R		20024 20024 20000		2 2BF 2 1BE 1 04Q	90172	20024	5BA	ASSEMBLY	EP .0060	
	388A 382-B	CONE CUP		0 0		1 2BF 1 1BH	90082	0	6BA	ASSEMBLY		

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q/A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END FLAY OR PRELOAD	OR	OBSOLETE DATE
	388A 383A	CONE CUP		0 0		1 2BF 1 1BF	90236	0		6BA ASSEMBLY			
	388A 383X	CONE CUP		0 0		1 2BF 1 1BF	90112	0		6BA ASSEMBLY			
	388A 384D X1S-388A	CONE CUP CONE SPCR A		20024 20024 20000		2 2BE 1 1BB 1 04P	90252 90262	20024 20024		5BB ASSEMBLY 5BB ASSEMBLY	EP .0080 EP .0120		
	388A 384D X1S-388A	CONE CUP CONE SPCR A		30000 30000 0		2 2BF 1 1BG 1 04P	90177	30000		6BB ASSEMBLY	EP .0060		
	388A 384D X1S-388A	CONE CUP CONE SPCR A		40024 40024 20000		2 2BE 1 1BB 1 04P	90146 90111	40024 40024		5BB ASSEMBLY 5BB ASSEMBLY	EP .0080 EP .0120		
	388A 384ED X2S-388A	CONE CUP CONE SPCR A		20024 20024 20000		2 2BE 1 1BB 1 04A	90210	20024		5BB ASSEMBLY	EP .0080		
	388A 384ED X2S-388A	CONE CUP CONE SPCR A		20024 20157 20000		2 2BE 1 1BB 1 04A	90285	20157		5BB ASSEMBLY	EP .0060		
	388A 384ED X2S-388A	CONE CUP CONE SPCR A		30000 30000 0		2 2BF 1 1BG 1 04A	90258 90340	30000 30000		6BB ASSEMBLY 6BB ASSEMBLY	EP .0070 EP .0080		
	388A 384ED X2S-388A	CONE CUP CONE SPCR A		40024 40024 20000		2 2BE 1 1BB 1 04A	90256	40024		5BB ASSEMBLY	EP .0080		
	388A 384EDC X2S-388A	CONE CUP CONE SPCR A	0	0	1 1BG	2 2BF	90324	0		6BB ASSEMBLY			
	388A 384EDC X2S-388A	CONE CUP CONE SPCR A		20024 20024 20000		2 2BE 1 1BB 1 04A	90308	20024		5BB ASSEMBLY	EP .0120		
	388A 384EDC X2S-388A	CONE CUP CONE SPCR A		30000 30000 0		2 2BF 1 1BG 1 04A	90246	30000		6BB ASSEMBLY	EP .0070		
	388A 384EDC X2S-388A	CONE CUP CONE SPCR A		0 0 0		2 2BF 1 1BG 1 04A	90342	0		6BB ASSEMBLY	EP .0070		
	388A L610549 382A L610510 X1S-388A	CONE CONE CUP CUP CONE SPCR A		40024 40024 40024 40024 20000		1 2BE 1 2BA 1 1BE 1 1BA 1 04P	90176	40024		5BA ASSEMBLY	EP .0200		
388AB	388AB 382-B	CONE CUP		00 00		1 2BF 1 1BH	90103	00		7BA ASSEMBLY			82 307
	388AB 383	CONE CUP		00 00		1 2BF 1 1BF	90251	00		7BA ASSEMBLY			82 307
	388AB 383A	CONE CUP		00 00		1 2BF 1 1BF	90139	00		7BA ASSEMBLY			82 307
388T	388T 382-B	CONE CUP		0 0		1 2BF 1 1BH	90084	0		6BA ASSEMBLY			75 301
388TD	388TD 383A	CONE CUP		0 0		1 2BG 2 1BF	90280	0		6BP ASSEMBLY			

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY DR PRELOAD	OBSOLETE DATE
388TDB	388TDB 383A	CONE CUP		00 00		1 2BG 2 1BF	90164	00	78P	ASSEMBLY		88 217
389	389 382	CONE CUP		0 0		1 2BF 1 1BF	90085	0	68A	ASSEMBLY		
	389 382	CONE CUP		0-30 0-39		1 2BF 1 1BF	90124	0-33	68A	ASSEMBLY		
	389 382A	CONE CUP		0 0		1 2BF 1 1BF	90087	0	68A	ASSEMBLY		
	389 382A	CONE CUP		00 00		1 2BF 1 1BF	90338	00	78A	ASSEMBLY		
	389 382-B	CONE CUP		0 0		1 2BF 1 1BH	90088	0	68A	ASSEMBLY		
	389 383	CONE CUP		0 0		1 2BF 1 1BF	90326	0	68A	ASSEMBLY		
	389 383A	CONE CUP		0 0		1 2BF 1 1BF	90135	0	68A	ASSEMBLY		
	389 383A	CONE CUP		0-174 0		1 2BF 1 1BF	90167	0-174	68A	ASSEMBLY		
	389 384D X3S-389	CONE CUP CONE SPCR		20024 20024 20000		2 2BA 1 1BB 1 04A	90296	20024	58B	ASSEMBLY	EP .0120	77 189
	389 384D X4S-389	CONE CUP CONE SPCR		40024 40024 20000		2 2BA 1 1BB 1 04A	90314	40024	58B	ASSEMBLY	EP .0120	77 249
	389 384ED	CONE CUP		0 0		2 2BF 1 1BG	90143	0	68B	ASSEMBLY		
	389 384ED X1S-389	CONE CUP CONE SPCR A		30000 30000 0		2 2BF 1 1BG 1 04A	90115	30000	68B	ASSEMBLY	EP .0060	
	389 384ED X1S-389	CONE CUP CONE SPCR A		40024 40024 20000		2 2BA 1 1BB 1 04A	90291	40024	58B	ASSEMBLY	EP .0120	
	389 384ED X1S-389	CONE CUP CONE SPCR A		0 0 0		2 2BF 1 1BG 1 04A	90145	0	68B	ASSEMBLY	EP .0060	
	389 384ED X2S-389	CONE CUP CONE SPCR BB		20177 20177 20000		2 2BA 1 1BB 1 04A	90192	20177	58B	ASSEMBLY	EP .0075	
	389 384EDC X1S-389	CONE CUP CONE SPCR A		40024 40024 20000		2 2BA 1 1BB 1 04A	90343	40024	58B	ASSEMBLY	EP .0120	
389A	389A 382	CONE CUP		0 0		1 2BF 1 1BF	90089	0	68A	ASSEMBLY		
	389A 382A	CONE CUP		40024 40024		1 2BL 1 1BE	9F499	4F024	58A	ASSEMBLY		
	389A 382A	CONE CUP		0 0		1 2BF 1 1BF	90091	0	68A	ASSEMBLY		
	389A 382A	CONE CUP		0-30 0-39		1 2BF 1 1BF	90092	0-33	68A	ASSEMBLY		

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OR OBSOLETE DATE
	389A 382-B	CONE CUP		0 0		1 2BF 1 1BH	90237	0		6BA ASSEMBLY		
	389A 383A	CONE CUP		0 0		1 2BF 1 1BF	90157	0		6BA ASSEMBLY		
	389A 384D	CONE CUP		0 0		2 2BF 1 1BG	90121	0		6BB ASSEMBLY		
	389A 384D	CONE CUP		0-30 0		2 2BF 1 1BG	90209	0-30		6BB ASSEMBLY		
	389A 384D	CONE CUP		20024 20024		2 2BL 1 1BB	90344 90093	20024 20024		5BB ASSEMBLY 5BB ASSEMBLY	EP .0040 EP .0080	
	X15-389A	CONE SPCR A		20000		1 04A						
	389A 384D	CONE CUP		30000 30000		2 2BF 1 1BG	90286 90228	30000 30000		6BB ASSEMBLY 6BB ASSEMBLY	EP .0020 EP .0070	
	X15-389A	CONE SPCR A		0		1 04A						
	389A 384D	CONE CUP		40024 40024		2 2BL 1 1BB	90242	40024		5BB ASSEMBLY	EP .0080	
	X15-389A	CONE SPCR A		20000		1 04A						
	389A 384D	CONE CUP		30000 30000		2 2BF 1 1BG	90249	30000		6BB ASSEMBLY	EP .0050	
	X15-389A	CONE SPCR A		0		1 04A						
	389A 384ED	CONE CUP		0 0		2 2BF 1 1BG	90094	0		6BB ASSEMBLY		
	389A 384ED	CONE CUP		20024 20024		2 2BL 1 1BB	90126	20024		5BB ASSEMBLY	EP .0120	
	X25-389A	CONE SPCR A		20000		1 04A						
	389A 384ED	CONE CUP		30000 30000		2 2BF 1 1BG	90328 90096	30000 30000		6BB ASSEMBLY 6BB ASSEMBLY	EP .0060 EP .0080	
	X25-389A	CONE SPCR A		0		1 04A						
	389A 384ED	CONE CUP		40024 40024		2 2BL 1 1BB	90336 90187	40024 40024		5BB ASSEMBLY 5BB ASSEMBLY	EP .0040 EP .0120	
	X25-389A	CONE SPCR A		20000		1 04A						
	389A 384ED	CONE CUP		0 0		2 2BF 1 1BG	90095	0		6BB ASSEMBLY	EP .0050	
	X25-389A	CONE SPCR A		0		1 04A						
	389A 28678	CONE CONE		40024 40024		1 2BL 1 2BL	90090	40024		5BA ASSEMBLY	EP .0090	
	382	CUP		40024		1 1BP						
	28623	CUP		40024		1 1BA						
	K84970	CUP SPCR R		20000		1 04A						
	389A 45287	CONE CONE		40024 40024		1 2BL 1 2BF	90318	40024		5BA ASSEMBLY	EP .0160	
	382A	CUP		40024		1 1BF						
	45220	CUP		40024		1 1BP						
	X35-389A	CONE SPCR A		20000		1 04A						
389AB	389AB 3A2A	CONE CUP		00 00		1 2BF 1 1BF	90097	00		7BA ASSEMBLY		82 307
	389AB 384ED	CONE CUP		00 00		2 2BF 1 1BG	90151	00		7BB ASSEMBLY	EP .0040	82 307
	X25-389A	CONE SPCR A		00		1 04A						
389AS	389AS 384D	CONE CUP		0 0		2 2BF 1 1BG	90128	0		6BB ASSEMBLY		

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q/A	COMP SGC	ASSY CODE	ASSY INSP	ASSY SGC	ASSY DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	389AS 384D X15-389A	CONE CUP CONE SPCR A		3E000 30000 0		2 2BF 1 1BG 1 04A	9E098	3E000	6BB	ASSEMBLY	EP .0060	89 079
	389AS 384D X15-389A	CONE CUP CONE SPCR A		3H000 30000 0		2 2BF 1 1BG 1 04A	9E098	3H000	6BB	ASSEMBLY	EP .0060	
	389AS 384D X15-389A	CONE CUP CONE SPCR A		30000 30000 0		2 2BF 1 1BG 1 04A	90107 90098	30000 30000	6BB 6BB	ASSEMBLY ASSEMBLY	EP .0050 EP .0060	81 343
	389AS 384D X15-389A	CONE CUP CONE SPCR A		38000 30000 0		2 2BF 1 1BG 1 04A	98098	38000	6BB	ASSEMBLY	EP .0060	86 037
	389AS 384D X15-389A	CONE CUP CONE SPCR A		40024 40024 20000		2 2BA 1 1BB 1 04A	90216	40024	5BB	ASSEMBLY	EP .0080	81 343
	389AS 384D X15-389A	CONE CUP CONE SPCR A		0 0 0		2 2BF 1 1BG 1 04A	90127	0	6BB	ASSEMBLY	EP .0060	
	389AS 384ED	CONE CUP		0 0		2 2BF 1 1BG	90195	0	6BB	ASSEMBLY		81 344
	389AS 384ED X25-389A	CONE CUP CONE SPCR A		40024 40024 20000		2 2BA 1 1BB 1 04A	90136	40024	5BB	ASSEMBLY	EP .0060	81 343
	389AS 384ED X25-389A	CONE CUP CONE SPCR A		0 0 0		2 2BF 1 1BG 1 04A	90199	0	6BB	ASSEMBLY	EP .0050	81 343
389ASB	389ASB 382-B	CONE CUP		00 00		1 2BF 1 1BH	90101	00	7BA	ASSEMBLY		88 217
389AH	389AH 382-B	CONE CUP		0 0		1 2BF 1 1BH	90099	0	6BA	ASSEMBLY		
389-B	389-B 382	CONE CUP		00 00		1 2BF 1 1BF	90150	00	7BA	ASSEMBLY		82 307
	389-B 382-B	CONE CUP		00 00		1 2BF 1 1BH	90100	00	7BA	ASSEMBLY		82 307
389DE	389DE 382 Y15-382	CONE CUP CUP SPCR		30000 30000 0		1 2BG 2 1BF 1 04B	90182	30000	6BP	ASSEMBLY	EP .0060	77 189
	389DE 382 Y15-382	CONE CUP CUP SPCR		40024 40024 20000		1 2BB 2 1BP 1 04B	90116	40024	5BP	ASSEMBLY	EP .0040	77 189
	389DE 382A Y25-382A	CONE CUP CUP SPCR Q		40024 40024 20000		1 2BB 2 1BE 1 04B	90203 90311	40024 40024	5BP 5BP	ASSEMBLY ASSEMBLY	EP .0120	
389HXX	389HXX 383AXX Y25-383A	CONE CUP CUP SPCR Q		20397 20397 20000		2 2B4 2 1B4 1 04Q	90255	20227	5BA	ASSEMBLY	EP .0085	
390	390 394A	CONE CUP		0-30 0		1 2CF 1 1BF	90010	0-30	6BA	ASSEMBLY		
	390 394AB	CONE CUP		0 0		1 2CF 1 1BH	90218	0	6BA	ASSEMBLY		
	390 394D	CONE CUP		0 0		2 2CF 1 1BG	90122	0	6BB	ASSEMBLY		