



390...B05
390...C05
392...D05
395...E05
395...F05
395...G05
395...H05
396...I05
397...J05
397...K05
398...L05
399...M05
399...N05
399...D05

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TYA	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	390 394D X15-390	CONE CUP CONE SPCR A		20024 20024 20000		2 2CL 1 1BB 1 04A	90279	20024	5BB	ASSEMBLY	EP .0060	
	390 394D X15-390	CONE CUP CONE SPCR A		30000 30000 0		2 2CF 1 1BG 1 04A	90330	30000	6BB	ASSEMBLY	EP .0040	
	390 394D X15-390	CONE CUP CONE SPCR A		40024 40024 20000		2 2CL 1 1BB 1 04A	90230 90011 90136	40024 40024 40024	5BB 5BB 5BB	ASSEMBLY ASSEMBLY ASSEMBLY	EP .0080 EP .0120 EP .0160	
	390 394D X15-390	CONE CUP CONE SPCR A		0 0 0		2 2CF 1 1BG 1 04A	90126	0	6BB	ASSEMBLY	EP .0030	
	390 394D X25-390	CONE CUP CONE SPCR A1		40024 40024 20000		2 2CL 1 1BB 1 04A	90178	40024	5BB	ASSEMBLY	EP .0160	
390A	390A 393A X15-390A Y25-393A	CONE CUP CONE SPCR CUP SPCR		30000 30000 0 0		2 2CF 2 1BF 1 04A 1 04B	90255	30000	6BA	ASSEMBLY	EP .0000	77 189
	390A 394A 394AB Y55-394A X45-395	CONE CUP CUP CUP SPCR Q CONE SPCR A		2F024 2F024 2F024 2F000 2F000		2 2CF 1 1BF 1 1BC 1 04Q 1 04P	9F2A3	2F024	5BA	ASSEMBLY	EP .0050	
	390A 394A 394AB Y55-394A X45-395	CONE CUP CUP CUP SPCR Q CONE SPCR A		2F024 2F024 2F286 2F000 2F000		2 2CE 1 1BP 1 1BC 1 04Q 1 04P	9F2A2	2F024	5BA	ASSEMBLY	EP .0050	
	390A 394A 394AB Y55-394A X45-395	CONE CUP CUP CUP SPCR Q CONE SPCR A		20024 20024 20286 20000 20000		2 2CE 1 1BP 1 1BC 1 04Q 1 04P	90273 902A2	20024 20024	5BA 5BA	ASSEMBLY ASSEMBLY	EP .0030 EP .0050	
	390A 394A Y25-394A	CONE CUP CUP SPCR R		40024 40024 20000		2 2CE 2 1BP 1 04Q	90341	40024	5BA	ASSEMBLY	EP .0100	
	390A 394A XC2318D XC2318-SA	CONE CUP CUP CUP SPCR		20227 20227 20227 20227		2 2CE 1 1BA 1 1BA 1 04A	902A4	20227	5BA	ASSEMBLY	EP .0100	90 074
	390A 394A K148884 X25-390A	CONE CUP CUP CONE SPCR A		20024 20024 20285 20000		2 2CE 1 1BP 1 1CC 1 04P	902A6 902A8	20024 20024	5BA 5BA	ASSEMBLY ASSEMBLY	EP .0100 EP .0120	
	390A 394D	CONE CUP		0 0		2 2CF 1 1BG	90012	0	6BB	ASSEMBLY		
	390A 394D	CONE CUP		0-30 0		2 2CF 1 1BG	90013	0-30	6BB	ASSEMBLY		
	390A 394D	CONE CUP		0-30 0-39		2 2CF 1 1BG	90208	0-33	6BB	ASSEMBLY		
	390A 394D X15-390A	CONE CUP CONE SPCR		0 0 0		2 2CF 1 1BG 1 04A	90282	0	6BB	ASSEMBLY	EP .0060	77 189

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q/A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OR	OBSOLETE DATE
390A 394D X1S-395	CONE			20024	2	2CE	902A7	20024	5BB	ASSEMBLY	EP .0010		
	CUP			20024	1	1BB	902A1	20024	5BB	ASSEMBLY	EP .0060		
	CONE SPCR A			20000	1	04P	90017	20024	5BB	ASSEMBLY	EP .0080		
							90018	20024	5BB	ASSEMBLY	EP .0120		
330A 394D X1S-395	CONE			30000	2	2CF	90143	30000	6BB	ASSEMBLY	EP .0030		
	CUP			30000	1	1BG	90016	30000	6BB	ASSEMBLY	EP .0040		
	CONE SPCR A			0	1	04P	90290	30000	6BB	ASSEMBLY	EP .0050		
							90154	30000	6BB	ASSEMBLY	EP .0050		80 189
390A 394D X1S-395	CONE			40024	2	2CE	90019	40024	5BB	ASSEMBLY	EP .0080		
	CUP			40024	1	1BB	90116	40024	5BB	ASSEMBLY	EP .0120		
	CONE SPCR A			20000	1	04P	90183	40024	5BB	ASSEMBLY	EP .0160		
390A 394D X1S-395	CONE			0	2	2CF	90268	0	6BB	ASSEMBLY	EP .0030		
	CUP			0	1	1BG	90014	0	6BB	ASSEMBLY	EP .0050		
	CONE SPCR A			0	1	04P							
390A 394D X1S-395	CONE			0-30	2	2CF	90015	0-30	6BB	ASSEMBLY	EP .0030		
	CUP			0	1	1BG							
	CONE SPCR A			0	1	04P							
390A 394DC X1S-395	CONE			20024	2	2CE	902A5	20024	5BB	ASSEMBLY	EP .0080		
	CUP			20024	1	1BB							
	CONE SPCR A			20000	1	04P							
390A 394DC X1S-395	CONE			30000	2	2CF	90147	30000	6BB	ASSEMBLY	EP .0050		
	CUP			30000	1	1BG							
	CONE SPCR A			0	1	04P							
390A 394DC X1S-395	CONE			40024	2	2CE	90182	40024	5BB	ASSEMBLY	EP .0120		
	CUP			40024	1	1BB							
	CONE SPCR A			20000	1	04P							
390A 3982 JXC1197DA 3920 XC1197-S XC1197-SA	CONE			20227	1	2CE	90342	20227	5BA	ASSEMBLY	EP .0050		
	CONE			20227	1	2CE							
	CUP			20227	1	1CA							
	CUP			20227	1	1BE							
	CONE SPCR A			20227	1	04A							
	CUP SPCR Q			20227	1	04B							
392 393	CONE			0	1	2CF	90292	0	6BA	ASSEMBLY			
	CUP			0	1	1BF							
392 394	CONE			0	1	2CF	90023	0	6BA	ASSEMBLY			
	CUP			0	1	1BF							
392 394A	CONE			0	1	2CF	90024	0	6BA	ASSEMBLY			
	CUP			0	1	1BF							
392 394A K444667R K444668R	CONE			40024	2	2CE	90286	40024	5BS	ASSEMBLY	EP .0140		
	CUP			40024	2	1BP							
	CONE SPCR SX			20000	1	049							
	CUP SPCR SY			20000	2	049							
392 394AB	CONE			0	1	2CF	90340	0	6BA	ASSEMBLY			
	CUP			0	1	1BH							
392 394AS	CONE			0	1	2CF	90025	0	6BA	ASSEMBLY			
	CUP			0	1	1BF							
392 394D	CONE			0	2	2CF	90235	0	6BB	ASSEMBLY			
	CUP			0	1	1EG							
392 394D X1S-392	CONE			20024	2	2CE	90130	20024	5BB	ASSEMBLY	EP .0030		
	CUP			20024	1	1BB	90291	20024	5BB	ASSEMBLY	EP .0050		
	CONE SPCR A			20000	1	04P	90027	20024	5BB	ASSEMBLY	EP .0080		
392 394D X1S-392	CONE			30000	2	2CF	90307	30000	6BB	ASSEMBLY	EP .0000		
	CUP			30000	1	1BG	90026	30000	6BB	ASSEMBLY	EP .0040		
	CONE SPCR A			0	1	04P	90129	30000	6BB	ASSEMBLY	EP .0050		

392

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	392	CONE		30434	2	2CF	90329	30434	6BB	ASSEMBLY	EP .0000	
	394D	CUP		30039	1	1BG						
	X15-392	CONE SPCR A		0	1	104P						
	392	CONE		40024	2	2CE	90274	40024	5BB	ASSEMBLY	EP .0060	
	394D	CUP		40024	1	1BB	90028	40024	5BB	ASSEMBLY	EP .0080	
	X15-392	CONE SPCR A		20000	1	104P	90159	40024	5BB	ASSEMBLY	EP .0100	
							90029	40024	5BB	ASSEMBLY	EP .0120	
	392	CONE		20024	2	2CE	90288	20024	5BB	ASSEMBLY	EP .0100	
	394DC	CUP		20024	1	1BB						
	X15-392	CONE SPCR A		20000	1	104P						
	392	CONE		40024	2	2CE	90205	40024	5BB	ASSEMBLY	EP .0120	
	394DC	CUP		40024	1	1BB						
	X15-392	CONE SPCR A		20000	1	104P						
394ARB	394ARB	CUP		20355	1	1BA	90188	20355	541	ASSEMBLY		
	K103233	SNAP RING			1	1090						
	394ARB	CUP		40355	1	1BA	90189	40355	541	ASSEMBLY		
	K103233	SNAP RING			1	1090						
395	395	CONE		0	1	2CF	90293	0	6BA	ASSEMBLY		
	393	CUP		0	1	1BF						
	395	CONE		0	1	2CF	90158	0	6BA	ASSEMBLY		
	393A	CUP		0	1	1BF						
	395	CONE		70000	2	2CE	90030	70000	5BA	ASSEMBLY	EP .0100	77 189
	393A	CUP		20024	2	1BA						
	X15-393A	CUP SPCR		20000	1	104B						
	X25-395	CONE SPCR		20000	1	104A						
	395	CONE		0	1	2CF	90031	0	6BA	ASSEMBLY		
	394	CUP		0	1	1BF						
	395	CONE		0	1	2CF	90032	0	6BA	ASSEMBLY		
	394A	CUP		0	1	1BF						
	395	CONE		40000	2	2CA	90216	40000	5BA			73 073
	394A	CUP		40000	1	1BA						
	394AB	CUP		40000	1	1BC						
	X55-394A	CUP SPCR Q		40000	1	104Q						
	X45-395	CONE SPCR A		40000	1	104P						
	395	CONE		20024	2	2CE	90209	20024	5BA	ASSEMBLY	EP .0030	
	394A	CUP		20024	2	1BP						
	X55-394A	CUP SPCR Q		20000	1	104Q						
	X45-395	CONE SPCR A		20000	1	104P						
	395	CONE		0	1	2CF	90033	0	6BA	ASSEMBLY		
	394AB	CUP		0	1	1BH						
	395	CONE		0	2	2CF	90118	0	6BB	ASSEMBLY		
	394D	CUP		0	1	1BG						
	395	CONE		40024	4	2CE	904A2	40024	5BB	ASSEMBLY	EP .0080	
	394D	CUP		40024	2	1BP						
	X25-394A	CUP SPCR R		20000	1	104Q						
	X15-395	CONE SPCR A		20000	2	104P						
	395	CONE		20024	2	2CE	90169	20024	5BB	ASSEMBLY	EP .0030	
	394D	CUP		20024	1	1BB	90139	20024	5BB	ASSEMBLY	EP .0060	
	X15-395	CONE SPCR A		20000	1	104P	90037	20024	5BB	ASSEMBLY	EP .0080	
							90038	20024	5BB	ASSEMBLY	EP .0090	
							90138	20024	5BB	ASSEMBLY	EP .0110	
							90039	20024	5BB	ASSEMBLY	EP .0120	

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OR	OBsolete DATE
395	CONE			30000	2	2CF	90134	30000	6BB	ASSEMBLY	EP .0000		
394D	CUP			30000	1	1BG	90034	30000	6BB	ASSEMBLY	EP .0030		
X1S 395	CONE SPCR A			0	1	04P	90035	30000	6BB	ASSEMBLY	EP .0040		
							90231	30000	6BB	ASSEMBLY	EP .0050		
							90181	30000	6BB	ASSEMBLY	EP .0060		
395	CONE			30030	2	2CF	90036	30030	6BB	ASSEMBLY	EP .0000		
394D	CUP			30000	1	1BG							
X1S 395	CONE SPCR A			0	1	04P							
395	CONE			30030	2	2CF	90319	30033	6BB	ASSEMBLY	EP .0030		
394D	CUP			30039	1	1BG							
X1S 395	CONE SPCR A			0	1	04P							
395	CONE			40024	2	2CE	90133	40024	5BB	ASSEMBLY	EP .0050	.0080	82 305
394D	CUP			40024	1	1BB	90127	40024	5BB	ASSEMBLY	EP .0060		
X1S 395	CONE SPCR A			20000	1	04P	90040	40024	5BB	ASSEMBLY	EP .0080		
							90271	40024	5BB	ASSEMBLY	EP .0100		
							90151	40024	5BB	ASSEMBLY	EP .0120		
							90219	40024	5BB	ASSEMBLY	EP .0160		
							90240	40024	5BB	ASSEMBLY	EP .0240		
395	CONE			0	2	2CF	90180	0	6BB	ASSEMBLY	EP .0050		
394D	CUP			0	1	1BG	90312	0	6BB	ASSEMBLY	PL .0010		
X1S 395	CONE SPCR A			0	1	04P							
395	CONE			20024	2	2CE	90041	20024	5BB	ASSEMBLY	EP .0120		
394D	CUP			20024	1	1BB	90266	20024	5BB	ASSEMBLY	EP .0160		
X3S 395	CONE SPCR A1			20000	1	04A							
395	CONE			40024	2	2CE	90042	40024	5BB	ASSEMBLY	EP .0120		
394D	CUP			40024	1	1BB	90160	40024	5BB	ASSEMBLY	EP .0200		
X1S 395	CONE SPCR A1			20000	1	04A							
395	CONE			0	2	2CF	90204	0	6BB	ASSEMBLY			
394DC	CUP			0	1	1BG							
395	CONE			40024	2	2CE	90170	40024	5BB	ASSEMBLY	EP .0080		
394DC	CUP			40024	1	1BB	90185	40024	5BB	ASSEMBLY	EP .0100		
X1S 395	CONE SPCR A			20000	1	04P	90150	40024	5BB	ASSEMBLY	EP .0120		
395	CONE			0	1	2CF	90043	0	6BA	ASSEMBLY			
3920	CUP			0	1	1BF							
395	CONE			40024	1	2CE	90256	40024	5BA	ASSEMBLY	EP .0160		77 235
3984	CONE			40024	1	2CE							
394A	CUP			40024	1	1BP							
3920	CUP			40024	1	1BE							
X7S 395	CONE SPCR			20000	1	04A							
395	CONE			40024	1	2CE	90284	40024	5CB	ASSEMBLY	EP .0080		
5595	CONE			40024	1	2CF							
F476894	CUP			40024	1	1CB							
R800001	CONE SPCR SX			20000	1	049							
395	CONE			40024	1	2CE	90248	40024	5CB	ASSEMBLY	EP .0080		
HM212049	CONE			40024	1	2CE							
K302664	CUP			40024	1	1CB							
X6S 395	CONE SPCR A			20000	1	04P							
395	CONE			40024	1	2CE	90308	40024	5CB	ASSEMBLY	EP .0080		
HM212049	CONE			40024	1	2CE							
K302664	CUP			40024	1	1CB							
X9S 395	CONE SPCR A1			20000	1	04A							
395A	CONE			0	1	2CF	90301	0	6BA	ASSEMBLY			
394	CUP			0	1	1BF							
395A	CONE			40024	1	2CE	9F499		5BA	ASSEMBLY			
394A	CUP			40024	1	1BP							

395A

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	DR	OBSOLETE DATE
395A 394A	CONE CUP			0 0		1 2CF 1 1BF	90044	0	6BA	ASSEMBLY			
395A 394A 135-394A	CONE CUP CUP SPCR	S		40024 40024 20000		2 2CE 2 1BP 1 04Q	90332 90295 904A3	40024 40024 40024	5BA 5BA 5BA	ASSEMBLY ASSEMBLY ASSEMBLY	EP .0000 EP .0040 EP .0040		
395A 394AB	CONE CUP			0 0		1 2CF 1 1BH	90045	0	6BA	ASSEMBLY			
395A 394AB	CONE CUP			00 00		1 2CF 1 1BH	90326	00	7BA	ASSEMBLY			
395A 394D	CONE CUP			0 0		2 2CF 1 1BG	90046	0	6BB	ASSEMBLY			
395A 394D	CONE CUP			0-30 0-39		2 2CF 1 1BG	90149	0-33	6BB	ASSEMBLY			
395A 394D X1S-395-S	CONE CUP CONE SPCR	A		20024 20024 20000		2 2CE 1 1BB 1 04Q	90051 90052	20024 20024	5BB 5BB	ASSEMBLY ASSEMBLY	EP .0060 EP .0080		
395A 394D X1S-395-S	CONE CUP CONE SPCR	A		30000 30000 0		2 2CF 1 1BG 1 04Q	90049 90050 90277	30000 30000 30000	6BB 6BB 6BB	ASSEMBLY ASSEMBLY ASSEMBLY	EP .0020 EP .0040 EP .0080		
395A 394D X1S-395-S	CONE CUP CONE SPCR	A		40024 40024 20000		2 2CE 1 1BB 1 04Q	90053 90090 90114 90184 90119	40024 40024 40024 40024 40024	5BB 5BB 5BB 5BB 5BB	ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY	EP .0060 EP .0080 EP .0120 EP .0140 EP .0160		
395A 394D X1S-395-S	CONE CUP CONE SPCR	A		0 0 0		2 2CF 1 1BG 1 04Q	90047 90046	0 0	6BB 6BB	ASSEMBLY ASSEMBLY	EP .0040 EP .0050		
395A 394D X1S-395-S	CONE CUP CONE SPCR	A		0-30 0-39 0		2 2CF 1 1BG 1 04Q	90161 90148	0-33 0-33	6BB 6BB	ASSEMBLY ASSEMBLY	EP .0040 EP .0050		
395A 394D X3S-395-S	CONE CUP CONE SPCR	A1		20024 20024 20000		2 2CE 1 1BB 1 04B	90142	20024	5BB	ASSEMBLY	EP .0080		
395A 394D X3S-395-S	CONE CUP CONE SPCR	A1		40024 40024 20000		2 2CE 1 1BB 1 04B	90225	40024	5BB	ASSEMBLY	EP .0100		
395A 394DC X1S-395-S	CONE CUP CONE SPCR	A		20024 20024 20000		2 2CE 1 1BB 1 04Q	90207	20024	5BB	ASSEMBLY	EP .0120		
395A 394DC X1S-395-S	CONE CUP CONE SPCR	A		30000 30000 0		2 2CF 1 1BG 1 04Q	90245 90237	30000 30000	6BB 6BB	ASSEMBLY ASSEMBLY	EP .0060 EP .0080		
395A 394DC X1S-395-S	CONE CUP CONE SPCR	A		40024 40024 20000		2 2CE 1 1BB 1 04Q	90156	40024	5BB	ASSEMBLY	EP .0080		
395A 394DC X1S-395-S	CONE CUP CONE SPCR	A		0 0 0		2 2CF 1 1BG 1 04Q	90229 90241	0 0	6BB 6BB	ASSEMBLY ASSEMBLY	EP .0050 EP .0060		
395A HM212049 K302664 HM212049XC	CONE CONE CUP CONE SPCR	A1		40024 40024 40024 20000		1 2CE 1 2CE 1 1CB 1 04A	90249	40024	5CB	ASSEMBLY	EP .0080		

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	ASSY SGC	ASSY DESC	END PLAY OR PRELOAD	OR	OBSOLETE DATE	
395AB	395AB 394	CONE CUP		00 00		1 2CF 1 1BF	90299	00		7BA ASSEMBLY			90 107	
	395AB 394A	CONE CUP		0 0		1 2CF 1 1BF	90197	0		6BA ASSEMBLY			76 299	
	395AB 394A	CONE CUP		00 00		1 2CF 1 1BF	90054	00		7BA ASSEMBLY			90 107	
	395AB 394D	CONE CUP		00 00		2 2CF 1 1BG	90125	00		7BB ASSEMBLY			90 107	
	395AB 394D X15-395-S	CONE CUP CONE SPCR A		00 00 00		2 2CF 1 1BG 1 04Q	90120	00		7BB ASSEMBLY	EP .0050		90 107	
	395-B	395-B 394	CONE CUP		00 00		1 2CF 1 1BF	90298	00		7BA ASSEMBLY			90 107
395-B 394D		CONE CUP		00 00		2 2CF 1 1BG	90222	00		7BB ASSEMBLY			90 107	
395LA	399A 394A X55-399A K444668R 395LA	CONE CUP CONE SPCR A CUP SPCR SY DUOFASEAL		20024 20024 20000 20000		2 2CE 2 1BP 1 04P 2 049 2 090	902A8 90333	20024 20024		5BS ASSEMBLY 5BS ASSEMBLY	EP .0060 EP .0120			
	399A 394A X55-399A K444668R 395LA	CONE CUP CONE SPCR A CUP SPCR SY DUOFASEAL		40024 40024 20000 20000		2 2CE 2 1BP 1 04P 2 049 2 090	90329	40024		5BS ASSEMBLY	EP .0160			
	399A 394A X65-399A 395LA	CONE CUP CONE SPCR A DUOFASEAL		4F024 4E024 2A000		2 2CA 2 1BP 1 04B 2 090	9A4A3	4A024		5BF ASSEMBLY	EP .0120			
	399A 394A K529691R K529692R 395LA	CONE CUP S.R. SPCR SX S.R. SPCR SY DUOFASEAL		20024 20024 20000 20000		2 2CE 2 1BP 1 049 2 049 2 090	902A6	20024		5BS ASSEMBLY	EP .0120			
	399A 395LA	CONE DUOFASEAL		20024		1 2CE 1 090	9U2A4	2U024		542 ASSEMBLY				
	399A 395LA	CONE DUOFASEAL		20024		1 2CE 1 090	902A4	20024		542 ASSEMBLY				
	399A 395LA	CONE DUOFASEAL		40024		1 2CE 1 090	90328	40024		542 ASSEMBLY				
	395LB	390 394A K444667R K444668R 395LB	CONE CUP CONE SPCR SX CUP SPCR SY DUOFASEAL		20024 20024 20000 20000		2 2CI 2 1BP 1 049 2 049 2 090	902A5	20024		5BA ASSEMBLY	EP .0100		
		390 395LB	CONE DUOFASEAL		20024		1 2CI 1 090	902A7	20024		542 ASSEMBLY			
	395LC	390A 395LC	CONE DUOFASEAL		40024		1 2CE 1 090	904A4	40024		542 ASSEMBLY			
	395-S	395-S 393A Y15-393A X25-395-S	CONE CUP CUP SPCR CONE SPCR		40024 40024 20000 20000		2 2CI 2 1BA 1 04B 1 04A	90055	40024		5BA ASSEMBLY	EP .0100		77 189

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	395-S 394	CONE CUP		0 0		1 2CF 1 1BF	90306	0		6BA ASSEMBLY		
	395-S 394A	CONE CUP		0 0		1 2CF 1 1BF	90056	0		6BA ASSEMBLY		
	395-S 394AS	CONE CUP		0 0		1 2CF 1 1BF	90322	0		6BA ASSEMBLY		
	395-S 394D	CONE CUP		0 0		2 2CF 1 1BG	90305	0		6BB ASSEMBLY		
	395-S 394D	CONE CUP		20024 20024		2 2CL 1 1BB	90152 90165	20024 20024		5BB ASSEMBLY 5BB ASSEMBLY	EP .0060 EP .0080	
	X15-395-S	CONE SPCR A		20000		1 04Q	90057	20024		5BB ASSEMBLY	EP .0120	
	395-S 394D	CONE CUP		30000 30000		2 2CF 1 1BG	90153 90131	30000 30000		6BB ASSEMBLY 6BB ASSEMBLY	EP .0040 EP .0050	
	X15-395-S	CONE SPCR A		0		1 04Q						
	395-S 394D	CONE CUP		30434 30039		2 2CF 1 1BG	90304	30434		6BB ASSEMBLY	EP .0000	
	X15-395-S	CONE SPCR A		0		1 04Q						
	395-S 394D	CONE CUP		40024 40024		2 2CL 1 1BB	90441 90058	40024 40024		5BB ASSEMBLY 5BB ASSEMBLY	EP .0070 EP .0080	
	X15-395-S	CONE SPCR A		20000		1 04Q	90228	40024		5BB ASSEMBLY	EP .0100	
							90059	40024		5BB ASSEMBLY	EP .0110	
							90132	40024		5BB ASSEMBLY	EP .0120	
	395-S 394D	CONE CUP		0 0		2 2CF 1 1BG	90174 90264	0 0		6BB ASSEMBLY 6BB ASSEMBLY	EP .0020 EP .0050	
	X15-395-S	CONE SPCR A		0		1 04Q						
	395-S 394D	CONE CUP		20024 20024		2 2CL 1 1BB	90262	20024		5BB ASSEMBLY	EP .0060	
	X15-395-S	CONE SPCR A1		20000		1 04B						
	395-S 394D	CONE CUP		40024 40024		2 2CL 1 1BB	90157 90123	40024 40024		5BB ASSEMBLY 5BB ASSEMBLY	EP .0120 EP .0160	
	X15-395-S	CONE SPCR A1		20000		1 04B						
	395-S 394DC	CONE CUP		0 0		2 2CF 1 1BG	90297	0		6BB ASSEMBLY	EP .0090	
	X15-395-S	CONE SPCR A		0		1 04Q						
	395-S EX1738DB	CONE CUP		40024 40000		2 2CL 1 1BB	90060	40000		5BB ASSEMBLY	EP .1200	72 166
	X15-395-S	CONE SPCR A		20000		1 04Q						
395-SB	395-SB 394A	CONE CUP		00 00		1 2CF 1 1BF	90294	00		7BA ASSEMBLY		90 107
3951D	3951D 394A	CONE CUP		0 0		1 2CG 2 1BF	90062	0		6CP ASSEMBLY		
	3951D 394A	CONE CUP		30000 30000		1 2CG 2 1BF	90242	30000		6CP ASSEMBLY	EP .0080	
	Y15-394A	CUP SPCR Q		0		1 04B						
	3951D 394A	CONE CUP		40000 40024		1 2CB 2 1BP	90110	40000		5CP ASSEMBLY	EP .0080	91 231
	Y15-394A	CUP SPCR Q		20000		1 04B						
395X	395X 394A	CONE CUP		0 0		1 2CF 1 1BF	90063	0		6BA ASSEMBLY		
	395X 394AB	CONE CUP		0 0		1 2CF 1 1BH	90206	0		6BA ASSEMBLY		

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	HSSY INSP	SGC	ASSY DESC	END PLAY DR PRELOAD	OBSOLETE DATE
396	396	CONE		0		1 2CF	90064	0		6BA ASSEMBLY		
	394	CUP		0		1 1BF						
	396	CONE		0		1 2CF	90065	0		6BA ASSEMBLY		
	394A	CUP		0		1 1BF						
	396	CONE		40024		2 2CA	90327	40024		5BA ASSEMBLY	EP .0100	
	394A	CUP		40024		2 1BP						
	Y2S-394A	CUP SPCR R		20000		1 04Q						
	396	CONE		0		1 2CF	90217	0		6BA ASSEMBLY		
	394AB	CUP		0		1 1BH						
	396	CONE		0		1 2CF	90066	0		6BA ASSEMBLY		
	394AS	CUP		0		1 1BF						
	396	CONE		30000		2 2CF	90203	30000		6BB ASSEMBLY	EP .0040	
	394D	CUP		30000		1 1BG						
	X1S-396	CONE SPCR A		0		1 04P						
	396	CONE		40024		2 2CA	90173	40024		5BB ASSEMBLY	EP .0040	
394D	CUP		40024		1 1BB	90328	40024		5BB ASSEMBLY	EP .0060		
X1S-396	CONE SPCR A		20000		1 04P	90144	40024		5BB ASSEMBLY	EP .0080		
						90067	40024		5BB ASSEMBLY	EP .0120		
396	CONE		0		2 2CF	90171	0		6BB ASSEMBLY	EP .0030		
394D	CUP		0		1 1BG							
X1S-396	CONE SPCR A		0		1 04P							
396	CONE		40024		2 2CA	90329	40024		5BB ASSEMBLY	EP .0120		
394D	CUP		40024		1 1BB	90267	40024		5BB ASSEMBLY	EP .0160		
X2S-396	CONE SPCR AA		20000		1 04A							
396	CONE		40024		2 2CA	90323	40024		5BB ASSEMBLY	EP .0120		
394DC	CUP		40024		1 1BB							
X1S-396	CONE SPCR A		20000		1 04P							
396-S	396-S	CONE		4E152		2 2CA	9E4A2	4E152		5BA ASSEMBLY	EP .0100	
	394A	CUP		4F082		2 1BP						
	Y2S-394A	CUP SPCR R		2E000		1 04Q						
	396-S	CONE		40024		2 2CA	904A1	40024		5BA ASSEMBLY	EP .0100	
	394A	CUP		40024		2 1BP						
	Y2S-394A	CUP SPCR R		20000		1 04Q						
396-S	CONE		40152		2 2CA	90068	40152		5BA ASSEMBLY	EP .0100		
394A	CUP		40082		2 1BP							
Y2S-394A	CUP SPCR R		20000		1 04Q							
397	397	CONE		0		1 2CF	90069	0		6BA ASSEMBLY		
	393	CUP		0		1 1BF						
	397	CONE		40024		2 2CI	90221	40024		5BA ASSEMBLY	EP .0120	
	393AS	CUP		40024		2 1BA						
	Y1S-393AS	CUP SPCR R		20000		1 04Q						
	397	CONE		40024		6 2CI	90220	40024		5BA ASSEMBLY	EP .0120	
	393AS	CUP		40024		6 1BA						
	Y1S-393AS	CUP SPCR R		20000		3 04Q						
	Y2S-393AS	CUP SPCR R		20000		2 04Q						
	X2S-397	CONE SPCR A1		20000		2 04A						
	397	CONE		0		1 2CF	90071	0		6BA ASSEMBLY		
	394	CUP		0		1 1BF						
397	CONE		0		1 2CF	90072	0		6BA ASSEMBLY			
394A	CUP		0		1 1BF							
397	CONE		0-30		1 2CF	90073	0-33		6BA ASSEMBLY			
394A	CUP		0-39		1 1BF							

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	ASSY SGC	DESC	END PLAY OR PRELOAD	OBSOLETE DATE
397 394A	CONE CUP			0-35 0-32	1	2CF 1BF	90316	0-35	6BA	ASSEMBLY		
397 394A	CONE CUP			0-174 0	1	2CF 1BF	90155	0-174	6BA	ASSEMBLY		
397 394A	CONE CUP			0-580 0	1	2CF 1BF	90332	0-580	6BA	ASSEMBLY		
397 394A	CONE CUP			0-4000 0-4000	1	2CF 1BF	94072	0-4000	6BA	ASSEMBLY		
397 394AB	CONE CUP			0 0	1	2CF 1BH	90075	0	6BA	ASSEMBLY		
397 394AB	CONE CUP			00 00	1	2CF 1BH	906A2	00	7BA	ASSEMBLY		
397 394AS	CONE CUP			0 0	1	2CF 1BF	90283	0	6BA	ASSEMBLY		
397 394AS Y35-394A	CONE CUP CUP SPCR S			40024 40024 20000	2 2 1	2CL 1BP 04Q	90246	40024	5BA	ASSEMBLY	EP .0120	
397 394D	CONE CUP			0 0	2	2CF 1BG	90076	0	6BB	ASSEMBLY		
397 394D X15-397	CONE CUP CONE SPCR A			20024 20024 20000	2 1 1	2CL 1BB 04P	90331 90078 90269 90079 90080 90202 90081 90082	20024 20024 20024 20024 20024 20024 20024 20024	5BB 5BB 5BB 5BB 5BB 5BB 5BB 5BB	ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY ASSEMBLY	EP .0020 EP .0030 EP .0040 EP .0050 EP .0070 EP .0080 EP .0100 EP .0120	
397 394D X15-397	CONE CUP CONE SPCR A			30000 30000 0	2 1 1	2CF 1BG 04P	90077	30000	6BB	ASSEMBLY	EP .0050	
397 394D X15-397	CONE CUP CONE SPCR A			40024 40024 20000	2 1 1	2CL 1BB 04P	90083 90117	40024 40024	5BB 5BB	ASSEMBLY ASSEMBLY	EP .0080 EP .0120	
397 394D X15-397	CONE CUP CONE SPCR A			0 0 0	2 1 1	2CF 1BG 04P	90163 90191	0 0	6BB 6BB	ASSEMBLY ASSEMBLY	EP .0020 EP .0030	
397 394D X15-397	CONE CUP CONE SPCR A			0-30 0 0	2 1 1	2CF 1BG 04P	90325	0-30	6BB	ASSEMBLY	EP .0010	
397 394D X15-397	CONE CUP CONE SPCR A			00 00 00	2 1 1	2CF 1BG 04P	90324	00	7BB	ASSEMBLY	EP .0030	
397 394D X35-397	CONE CUP CONE SPCR			40024 40024 20000	2 1 1	2CL 1BB 04A	90259	40024	5BB	ASSEMBLY	EP .0160	77 189
397 394DC X15-397	CONE CUP CONE SPCR A			20024 20024 20000	2 1 1	2CL 1BB 04P	90303	20024	5BB	ASSEMBLY	EP .0020	
397 394DC X15-397	CONE CUP CONE SPCR A			30000 30000 0	2 1 1	2CF 1BG 04P	90227	30000	6BB	ASSEMBLY	EP .0040	

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	397	CONE		40024		2 2CL	90321	40024	5BB ASSEMBLY	EP .0080	
	394DC	CUP		40024		1 1BB	90309	40024	5BB ASSEMBLY	EP .0120	
	X15-397	CONE SPCR A		20000		1 04P					
	397	CONE		0		2 2CF	90224	0	6BB ASSEMBLY	EP .0050	
	394DC	CUP		0		1 1BG					
	X15-397	CONE SPCR A		0		1 04P					
	397	CONE		0		1 2CF	90084	0	6BA ASSEMBLY		
	3920	CUP		0		1 1BF					
	397	CONE		40024		1 2CL	90070	40024	5BA ASSEMBLY	EP .0080	
	3977	CONE		40024		1 2CA					
	393A	CUP		40024		1 1BA					
	3920	CUP		40024		1 1BE					
	K63681	CONE SPCR A		20000		1 04A					
	397	CONE		20024		1 2CL	902A1	20024	5BA ASSEMBLY	EP .0080	
	3977	CONE		20024		1 2CA					
	394A	CUP		20024		1 1BP					
	3920	CUP		20024		1 1BE					
	Y25-3920	CUP SPCR R		20000		1 04Q					
	397	CONE		40024		1 2CL	90074	40024	5BA ASSEMBLY	EP .0050	
	3977	CONE		40024		1 2CA					
	394A	CUP		40024		1 1BP					
	3920	CUP		40024		1 1BE					
	Y25-3920	CUP SPCR R		20000		1 04Q					
	397	CONE		40024		1 2CL	90086	40000	5CB ASSEMBLY	EP .0060	
	3980	CONE		40024		1 2CL					
	XC1738DA	CUP		40000		1 1DB					
	XC1738-S	CONE SPCR A		20000		1 04P					
	397	CONE		40024		1 2CL	90333	40024	5BB ASSEMBLY	EP .0080	
	5595	CONE		40024		1 2CL					
	K529695	CUP		40024		1 1CB					
	X45-397	CONE SPCR B		20000		1 04B					
397-B	397-B	CONE		00		1 2CF	90087	00	7BA ASSEMBLY		90 107
	394A	CUP		00		1 1BF					
	397-B	CONE		00-227		1 2CF	90311	00-227	7BA ASSEMBLY		90 107
	394A	CUP		00-227		1 1BF					
	397-B	CONE		00		1 2CF	90281	00	7BA ASSEMBLY		
	394AB	CUP		00		1 1BH					
	397-B	CONE		00		2 2CF	90088	00	7BB ASSEMBLY		90 107
	394D	CUP		00		1 1BG					
NA397	NA397	CONE		20194		2 2CA	90111	20194	5BB ASSEMBLY	EP .0160	
	394D	CUP		20081		1 1BB					
	NA397	CONE		30000		2 2CF	90089	30000	6BB ASSEMBLY	EP .0040	
	394D	CUP		30001		1 1BG					
	NA397	CONE		30000		2 2CF	90238	30000	6BB ASSEMBLY	EP .0040	
	394DC	CUP		30001		1 1BG					
1-397	U397	CONE		40000		1 2AD	90010	40000	544 ASSEMBLY	EP .0100-.2100	
	U367L	CUP		40000		1 1AS					
398	398	CONE		0		1 2CF	90092	0	6BA ASSEMBLY		
	394A	CUP		0		1 1BF					
	398	CONE		40081		2 2CA	90258	40081	5BA ASSEMBLY	EP .0120	
	394AS	CUP		40081		2 1BP					
	Y35-394A	CUP SPCR S		20000		1 04Q					

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	398	CONE		20024	2	2CA	90280	20024	5BB ASSEMBLY	EP .0050	
	394D	CUP		20024	1	1BB	90239	20024	5BB ASSEMBLY	EP .0060	
	X15-398	CONE SPCR A		20000	1	04A	90094	20024	5BB ASSEMBLY	EP .0080	
	398	CONE		30000	2	2CF	90093	30000	6BB ASSEMBLY	EP .0040	
	394D	CUP		30000	1	1BF	90254	30000	6BB ASSEMBLY	EP .0050	
	X15-398	CONE SPCR A		0	1	04A	90145	30000	6BB ASSEMBLY	EP .0060	
	398	CONE		40024	2	2CA	90223	40024	5BB ASSEMBLY	EP .0040	
	394D	CUP		40024	1	1BB	90172	40024	5BB ASSEMBLY	EP .0080	
	X15-398	CONE SPCR A		20000	1	04A	90200	40024	5BB ASSEMBLY	EP .0120	
399A	399A	CONE		0	1	2CF	90162	0	6BA ASSEMBLY		
	393A	CUP		0	1	1BF					
	399A	CONE		0	1	2CF	90091	0	6BA ASSEMBLY		
	394	CUP		0	1	1BF					
	399A	CONE		4F024	1	2CA	9F499	4F024	5BA ASSEMBLY		
	394A	CUP		40024	1	1BP					
	399A	CONE		0	1	2CF	90096	0	6BA ASSEMBLY		
	394A	CUP		0	1	1BF					
	399A	CONE		0-174	1	2CF	90320	0-174	6BA ASSEMBLY		
	394A	CUP		0	1	1BF					
	399A	CONE		40024	2	2CE	90190	40024	5BA ASSEMBLY	EP .0150	
	394A	CUP		40024	2	1BP					
	Y45-394A	CUP SPCR RSR		20000	1	04B					
	X25-399A	CONE SPCR A		20000	1	04A					
	399A	CONE		30434	2	2CF	90314	30434	6BS ASSEMBLY	EP .0010	
	394A	CUP		30039	2	1BF					
	Y75-394A	CUP SPCR S		0	1	04Q					
	X75-399A	CONE SPCR A		0	1	04Q					
	399A	CONE		30434	2	2CF	90317	30434	6BS ASSEMBLY	EP .0010	
	394A	CUP		30039	2	1BF					
	Y85-394A	CUP SPCR S		0	1	04B					
	X85-399A	CONE SPCR A		0	1	04B					
	399A	CONE		40024	2	2CE	904A3	40024	5BA ASSEMBLY	EP .0070	
	394A	CUP		40024	2	1BP					
	X1H399A	CUP SPCR AH		20000	1	04B					
	399A	CONE		40024	2	2CE	904A2	40024	5BA ASSEMBLY	EP .0070	
	394A	CUP		40024	2	1BP	90141	40024	5BA ASSEMBLY	EP .0100	
	X1S-399A	CONE SPCR A		20000	1	04P	90210	40024	5BA ASSEMBLY	EP .0140	
	399A	CONE		40024	2	2CE	90257	40024	5BS ASSEMBLY	EP .0140	
	394A	CUP		40024	2	1BP					
	X55-399A	CONE SPCR A		20000	1	04P					
	XC914-5D	CUP SPCR SY		20000	2	049					
	399A	CONE		20227	2	2CA	902A7	20227	5BS ASSEMBLY	EP .0080	
	394A	CUP		20227	2	1BA					
	X55-399A	CONE SPCR A		20000	1	04P					
	XC1738-SF	CUP SPCR		20000	1	04B					
	399A	CONE		20540	2	2CE	902A4	20540	5BS ASSEMBLY	EP .0090	
	394A	CUP		20024	2	1BP					
	K143291	CUP SPCR BB		20000	1	04Q					
	K143293R	SNAP RING SY		20000	2	049					
	399A	CONE		20540	2	2CE	902A6	20671	5BS ASSEMBLY	EP .0110	
	394A	CUP		20024	2	1BP					
	K143293R	SNAP RING SY		20000	2	049					

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q-A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OR	DESOLETE DATE
	399A	CONE		20024	2	2CE	90332	20227	58S	ASSEMBLY	EP .0070		
	394A	CUP		20024	2	1BP							
	K326056R	CONE SPCR SX		20227	1	049							
	K444668R	CUP SPCR SY		20000	2	049							
	399A	CONE		20024	2	2CE	90331	20024	58S	ASSEMBLY	EP .0070		
	394A	CUP		20024	2	1BP	90334	20024	58F	ASSEMBLY	EP .0120		87 327
	K529691R	S.R. SPCR SX		20000	1	049							
	K529692R	S.R. SPCR SY		20000	2	049							
	399A	CONE		0	1	2CF	90098	0	68A	ASSEMBLY			
	394AB	CUP		0	1	1BH							
	399A	CONE		0	2	2CF	90099	0	68B	ASSEMBLY			
	394D	CUP		0	1	1BG							
	399A	CONE		0-174	2	2CF	90198	0-174	68B	ASSEMBLY			
	394D	CUP		0	1	1BG							
	399A	CONE		20024	2	2CE	90112	20024	58B	ASSEMBLY	EP .0000		
	394D	CUP		20024	1	1BB	90176	20024	58B	ASSEMBLY	EP .0060		
	X15-399A	CONE SPCR A		20000	1	04P	90137	20024	58B	ASSEMBLY	EP .0080		
	399A	CONE		20024	2	2CE	90124	20157	58B	ASSEMBLY	EP .0040		
	394D	CUP		20157	1	1BB							
	X15-399A	CONE SPCR A		20000	1	04P							
	399A	CONE		20024	2	2CE	90196	40286	58B	ASSEMBLY	EP .0100		
	394D	CUP		40286	1	1BB							
	X15-399A	CONE SPCR A		20000	1	04P							
	399A	CONE		20030	2	2CE	90175	20358	58B	ASSEMBLY	EP .0010		
	394D	CUP		20157	1	1BB							
	X15-399A	CONE SPCR A		20000	1	04P							
	399A	CONE		30000	2	2CF	90100	30000	68B	ASSEMBLY	EP .0000		
	394D	CUP		30000	1	1BG	90247	30000	68B	ASSEMBLY	EP .0010		
	X15-399A	CONE SPCR A		0	1	04P	90101	30000	68B	ASSEMBLY	EP .0050		
							90177	30000	68B	ASSEMBLY	EP .0060		
							90215	30000	68B	ASSEMBLY	PL .0010		
	399A	CONE		30030	2	2CF	90296	30033	68B	ASSEMBLY	EP .0010		
	394D	CUP		30039	1	1BG	90187	30033	68B	ASSEMBLY	PL .0010		
	X15-399A	CONE SPCR A		0	1	04P							
	399A	CONE		30434	2	2CF	90252	30434	68B	ASSEMBLY	EP .0000		
	394D	CUP		30039	1	1BG	90315	30434	68B	ASSEMBLY	EP .0010		
	X15-399A	CONE SPCR A		0	1	04P							
	399A	CONE		40024	2	2CE	90234	40024	58B	ASSEMBLY	EP .0080		
	394D	CUP		40024	1	1BB	90102	40024	58B	ASSEMBLY	EP .0120		
	X15-399A	CONE SPCR A		20000	1	04P	90103	40024	58B	ASSEMBLY	EP .0160		
	399A	CONE		0	2	2CF	90287	0	68B	ASSEMBLY	EP .0020		
	394D	CUP		0	1	1BG	90260	0	68B	ASSEMBLY	EP .0050		
	X15-399A	CONE SPCR A		0	1	04P	90233	0	68B	ASSEMBLY	PL .0010		
	399A	CONE		30000	2	2CF	90272	30000	68B	ASSEMBLY	EP .0000		
	394D	CUP		30000	1	1BG							
	X15-399A	CONE SPCR A1		0	1	04A							
	399A	CONE		40024	2	2CE	90244	40024	58B	ASSEMBLY	EP .0100		
	394D	CUP		40024	1	1BB							
	X15-399A	CONE SPCR A1		20000	1	04A							
	399A	CONE		0	2	2CF	90199	0	68B	ASSEMBLY			
	394DC	CUP		0	1	1BG							
	399A	CONE		30000	2	2CF	90214	30000	68B	ASSEMBLY	EP .0000		
	394DC	CUP		30000	1	1BG	90212	30000	68B	ASSEMBLY	EP .0050		
	X15-399A	CONE SPCR A		0	1	04P	90193	30000	68B	ASSEMBLY	EP .0060		

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q/A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OBSOLETE DATE
	399A	CONE		30030	2	2CF	90213	30033	6BB	ASSEMBLY	EP .0000	
	394DC	CUP		30039	1	1BG	90250	30033	6BB	ASSEMBLY	PL .0010	
	X15-399A	CONE SPCR A		0	1	04P						
	399A	CONE		40024	2	2CE	90253	40024	5BB	ASSEMBLY	EP .0120	
	394DC	CUP		40024	1	1BB						
	X15-399A	CONE SPCR A		20000	1	04P						
	399A	CONE		40024	2	2CE	90261	40024	5BB	ASSEMBLY	EP .0100	
	394DC	CUP		40024	1	1BB						
	X45-399A	CONE SPCR AI		20000	1	04A						
	399A	CONE		30000	2	2CF	90201	30000	6BB	ASSEMBLY		
	XC1738DD	CUP		30000	1	1BG						
	X15-399A	CONE SPCR A		0	1	04P						
	399A	CONE		30000	2	2CF	90285	30000	6BB	ASSEMBLY	EP .0180	84 187
	XC1738DE	CUP		30000	1	1BG						
	X15-399A	CONE SPCR A		0	1	04P						
	399A	CONE		40024	1	2CE	90097	40024	5CA	ASSEMBLY	EP .0090	
	HM813846	CONE		40024	1	2CA						
	394A	CUP		40024	1	1BP						
	HM813810	CUP		40024	1	1CL						
	HM813810EA	CUP SPCR SPE		20000	1	04C						
399AB	399AB	CONE		00	1	2CF	90104	00	7BA	ASSEMBLY		90 107
	394	CUP		00	1	1BF						
	399AB	CONE		00	1	2CF	90109	00	7BA	ASSEMBLY		90 107
	394A	CUP		00	1	1BF						
	399AB	CONE		0	1	2CF	90304	0	6BA	ASSEMBLY		76 299
	394AB	CUP		0	1	1BH						
	399AB	CONE		00	1	2CF	90313	00	7BA	ASSEMBLY		90 107
	394AB	CUP		00	1	1BH						
	399AB	CONE		00	2	2CF	90105	00	7BB	ASSEMBLY		
	394D	CUP		00	1	1BG						
399AL	399AL	CONE		40000	2	2CA	90300	40000	5BF	ASSEMBLY	EP .0160	88 133
	394A	CUP		40024	2	1BP						
	X55-399A	CONE SPCR A		20000	1	04P						
	K444668R	CUP SPCR SY		20000	2	049						
	395LL	DUOFASEAL		20000	2	090						
	399AL	CONE		40000	1	2CA	90128	40000	542	ASSEMBLY		88 133
	395LL	DUOFASEAL			1	090						
399AS	399AS	CONE		0	1	2CF	90318	0	6BA	ASSEMBLY		
	394	CUP		0	1	1BF						
	399AS	CONE		0	1	2CF	90310	0	6BA	ASSEMBLY		
	394A	CUP		0	1	1BF						
	399AS	CONE		0	1	2CF	90106	0	6BA	ASSEMBLY		
	394AB	CUP		0	1	1BH						
	399AS	CONE		0	2	2CF	90164	0	6BB	ASSEMBLY		
	394D	CUP		0	1	1BG						
	399AS	CONE		20024	4	2CE	90265	20024	5BC	ASSEMBLY	EP .0100	
	394D	CUP		20024	2	1BB						
	Y25-399A	CUP SPCR R		20000	1	04A						
	X15-399A	CONE SPCR A		20000	2	04P						
	399AS	CONE		20024	2	2CE	90107	20024	5BB	ASSEMBLY	EP .0000	
	394D	CUP		20024	1	1BB						
	X15-399A	CONE SPCR A		20000	1	04P						

ASSEMBLY PART NUMBER	COMPONENT PART NUMBER	DESC	SP TY	COMP INSP	Q/A	COMP SGC	ASSY CODE	ASSY INSP	SGC	ASSY DESC	END PLAY OR PRELOAD	OR DATE	OBSOLETE DATE
	399AS	CONE		40024	2	2CE	90276	40024	5BB	ASSEMBLY	EP .0080		
	394D	CUP		40024	1	1BB	90115	40024	5BB	ASSEMBLY	EP .0120		
	X1S-399A	CONE SPCR A		20000	1	04P							
	399AS	CONE		0	2	2CF	90302	0	6BB	ASSEMBLY	EP .0050		
	394D	CUP		0	1	1BG							
	X1S-399A	CONE SPCR A		0	1	04P							
	399AS	CONE		20024	2	2CE	90263	20024	5BB	ASSEMBLY	EP .0090		
	394D	CUP		20024	1	1BB							
	X4S-399A	CONE SPCR A1		20000	1	04A							
	399AS	CONE		20024	2	2CE	90263	20024	5BB	ASSEMBLY	EP .0090		
	394D	CUP		20024	1	1BB							
	X4S-399A	CONE SPCR A1		20000	1	04A							
	399AS	CONE		40024	2	2CE	90251	40024	5BB	ASSEMBLY	EP .0120		
	394D	CUP		40024	1	1BB							
	X4S-399A	CONE SPCR A1		20000	1	04A							
	399AS	CONE		20024	2	2CE	90275	20024	5BB	ASSEMBLY	EP .0060		
	394DC	CUP		20024	1	1BB							
	X1S-399A	CONE SPCR A		20000	1	04P							
	399AS	CONE		40024	2	2CE	90211	40024	5BB	ASSEMBLY	EP .0120		
	394DC	CUP		40024	1	1BB							
	X1S-399A	CONE SPCR A		20000	1	04P							
399D	399D	CONE		0	1	2CG	90226	0	6CP	ASSEMBLY			
	394A	CUP		0	2	1BF							
	399D	CONE		20024	1	2CB	90186	20024	5CP	ASSEMBLY	EP .0040		
	394A	CUP		20024	2	1BP							
	Y1S-394A	CUP SPCR Q		20000	1	04B							
	399D	CONE		30000	1	2CG	90146	30000	6CP	ASSEMBLY	EP .0000		
	394A	CUP		30000	2	1BF	90243	30000	6CP	ASSEMBLY	EP .0000		
	Y1S-394A	CUP SPCR Q		0	1	04B							
	399D	CONE		40024	1	2CB	9E4A5	4E024	5CP	ASSEMBLY	EP .0120		
	394A	CUP		4E024	2	1BP							
	Y1S-394A	CUP SPCR Q		20000	1	04B							
	399D	CONE		40024	1	2CB	90194	40024	5CP	ASSEMBLY	EP .0040		
	394A	CUP		40024	2	1BP	90270	40024	5CP	ASSEMBLY	EP .0120		
	Y1S-394A	CUP SPCR Q		20000	1	04B							
	399D	CONE		0	1	2CG	90179	0	6CP	ASSEMBLY			
	394AS	CUP		0	2	1BF							
	399D	CONE		40024	1	2CB	90108	40024	5CP	ASSEMBLY	EP .0040		
	394AS	CUP		40024	2	1BP	90330	40024	5CP	ASSEMBLY	EP .0120		
	Y1S-394A	CUP SPCR Q		20000	1	04B							
U399	U399	CONE		40000	1	2AD	90010		544	ASSEMBLY		86 009	
	U360L	CUP		40000	1	1AS							
	U399	CONE		40000	1	2AD	90010	40000	544	ASSEMBLY			
	U360L	CUP		40000	1	1AS							
	U399	CONE		40000	1	2AD	90013	40227	544	ASSEMBLY	EP .0200		
	U360L	CUP		40000	1	1AS							
	U399	CONE		40000	1	2AD	90014	40522	544	ASSEMBLY	EP .0100-.0160		
	U360L	CUP		40000	1	1AS							
	U399	CONE		40000	1	2AD	9501C	45000	544	ASSEMBLY			
	U360L	CUP		40000	1	1AS							
	U399	CONE		40227	1	2AA	90333	40227	544	ASSEMBLY			
	U360L	CUP		40000	1	1AS	904A1	4C227	544	ASSEMBLY	EP .0040-.0100		